

FLUKE 51,52

K/J Thermometer

Service Manual

PN 768234

February 1986 Rev. 1, 6/95

© 1986, 1995 Fluke Corporation. All rights reserved. Printed in U.S.A.
All product names are trademarks of their respective companies

FLUKE®

LIMITED WARRANTY & LIMITATION OF LIABILITY

Each Fluke product is warranted to be free from defects in material and workmanship under normal use and service. The warranty period is three years and begins on the date of shipment. Parts, product repairs and services are warranted for 90 days. This warranty extends only to the original buyer or end-user customer of a Fluke authorized reseller, and does not apply to fuses, disposable batteries or to any product which, in Fluke's opinion, has been misused, altered, neglected or damaged by accident or abnormal conditions of operation or handling. Fluke warrants that software will operate substantially in accordance with its functional specifications for 90 days and that it has been properly recorded on non-defective media. Fluke does not warrant that software will be error free or operate without interruption.

Fluke authorized resellers shall extend this warranty on new and unused products to end-user customers only but have no authority to extend a greater or different warranty on behalf of Fluke. Warranty support is available if product is purchased through a Fluke authorized sales outlet or Buyer has paid the applicable international price. Fluke reserves the right to invoice Buyer for importation costs of repair/replacement parts when product purchased in one country is submitted for repair in another country.

Fluke's warranty obligation is limited, at Fluke's option, to refund of the purchase price, free of charge repair, or replacement of a defective product which is returned to a Fluke authorized service center within the warranty period.

To obtain warranty service, contact your nearest Fluke authorized service center or send the product, with a description of the difficulty, postage and insurance prepaid (FOB Destination), to the nearest Fluke authorized service center. Fluke assumes no risk for damage in transit. Following warranty repair, the product will be returned to Buyer, transportation prepaid (FOB Destination). If Fluke determines that the failure was caused by misuse, alteration, accident or abnormal condition of operation or handling, Fluke will provide an estimate of repair costs and obtain authorization before commencing the work. Following repair, the product will be returned to the Buyer transportation prepaid and the Buyer will be billed for the repair and return transportation charges (FOB Shipping Point).

THIS WARRANTY IS BUYER'S SOLE AND EXCLUSIVE REMEDY AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. FLUKE SHALL NOT BE LIABLE FOR ANY SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LOSSES, INCLUDING LOSS OF DATA, WHETHER ARISING FROM BREACH OF WARRANTY OR BASED ON CONTRACT, TORT, RELIANCE OR ANY OTHER THEORY.

Since some countries or states do not allow limitation of the term of an implied warranty, or exclusion or limitation of incidental or consequential damages, the limitations and exclusions of this warranty may not apply to every buyer. If any provision of this Warranty is held invalid or unenforceable by a court of competent jurisdiction, such holding will not affect the validity or enforceability of any other provision.

Fluke Corporation
P.O. Box 9090
Everett WA 98206-9090

Fluke Europe B.V.
P.O. Box 1186
5602 B.D.
Eindhoven
The Netherlands

Table of Contents

| SECTION | TITLE | PAGE |
|----------|--|------------|
| 1 | INTRODUCTION AND SPECIFICATIONS | 1-1 |
| 1-1. | INTRODUCTION | 1-1 |
| 1-2. | OPERATING INSTRUCTIONS | 1-1 |
| 1-3. | SUMMARY OF CONTROLS AND MODES | 1-1 |
| 1-4. | SPECIFICATIONS | 1-1 |
| 2 | THEORY OF OPERATION | 2-1 |
| 2-1. | INTRODUCTION | 2-1 |
| 2-2. | FUNCTIONAL OVERVIEW | 2-1 |
| 2-3. | DETAILED DESCRIPTION | 2-1 |
| 2-4. | Power Supply and Switching | 2-1 |
| 2-5. | Analog Circuitry | 2-2 |
| 2-6. | Digital Circuitry | 2-3 |
| 2-7. | INSTRUMENT CONTROL MODES | 2-3 |
| 2-8. | Secondary Functions | 2-3 |
| 2-9. | Calibration Modes | 2-3 |
| 3 | MAINTENANCE | 3-1 |
| 3-1. | INTRODUCTION | 3-1 |
| 3-2. | SERVICE INFORMATION | 3-1 |
| 3-3. | GENERAL MAINTENANCE | 3-1 |
| 3-4. | Instrument Disassembly | 3-1 |
| 3-5. | Display Access | 3-2 |
| 3-6. | Cleaning | 3-2 |
| 3-7. | PERFORMANCE TEST | 3-2 |
| 3-8. | Initial Procedure | 3-3 |
| 3-9. | Display Test | 3-3 |
| 3-10. | WIDE RANGE PERFORMANCE TEST PROCEDURE | 3-3 |
| 3-11. | Ice Bath Construction | 3-4 |
| 3-12. | Ice Bath Test | 3-4 |
| 3-13. | CALIBRATION PROCEDURE | 3-5 |
| 3-14. | Instrument Calibration | 3-5 |
| 3-15. | Thermocouple Input Calibration | 3-7 |

TABLE OF CONTENTS, *continued*

| | | |
|----------|---|------------|
| 3-16. | TRUBLESHOOTING | 3-7 |
| 3-17. | Introduction | 3-7 |
| 3-18. | Fault Diagnosis Guide | 3-8 |
| 3-12. | Using Calibration Modes for Troubleshooting | 3-8 |
| 4 | LIST OF REPLACEMENT PARTS | 4-1 |
| | TABLE OF CONTENTS | |
| 4-1. | INTRODUCTION | 4-2 |
| 4-2. | HOW TO OBTAIN PARTS | 4-2 |
| 4-3. | MANUAL STATUS INFORMATION | 4-2 |
| 4-4. | NEWER IN INSTRUMENTS | 4-2 |
| 4-5. | SERVICE CENTERS | 4-2 |
| 5 | LIST OF ABBREVIATIONS | 5-1 |
| 5-1. | INTRODUCTION | 5-1 |
| 6 | SCHEMATIC DIAGRAM | 6-1 |
| | TABLE OF CONTENTS | 6-1 |

List of Tables

| FIGURE | TITLE | PAGE |
|--------|----------------------------------|------|
| 3-1. | Recommended Test Equipment | 3-4 |
| 3-2. | Performance Test Values | 3-5 |
| 3-3. | Fault Guide | 3-9 |

List of Illustrations

| FIGURE | TITLE | PAGE |
|--------|---|------|
| 2-1. | Functional Overview | 2-2 |
| 3-1. | Display Assembly | 3-2 |
| 3-2. | Lubricating the Thermocouple Connectors | 3-3 |
| 3-3. | Display Test | 3-3 |
| 3-4. | Equipment Connections | 3-5 |
| 3-5. | Calibration Adjustment Connections | 3-6 |
| 3-6. | Room Temperature Lag Bath | 3-7 |
| 3-7. | Error Indication | 3-8 |

Section 1

Introduction and Specifications

1-1. INTRODUCTION

This manual presents service information for the Fluke 51 and 52 K/J Thermometers. Included are a theory of operation, general maintenance procedures, performance tests, calibration procedures, troubleshooting information, a list of replacement parts, and schematic diagrams.

1-2. OPERATING INSTRUCTIONS

For operating instructions, refer to the Operator's Manual provided with the instrument at the time of purchase, or order Fluke P/N 769026 for the 51 K/J Thermometer

Operator's Manual or Fluke P/N 764712 for the 52 K/J Thermometer Operator's Manual.

1-3. SUMMARY OF CONTROLS AND MODES

For information regarding controls and modes of the 51/52, refer to the Operator's Manual provided with the instrument at the time of purchase, or turn to the Theory of Operation section in this manual.

1-4. SPECIFICATIONS

For instrument specifications, refer to the Operator's Manual provided with the instrument at the time of purchase.

Section 2

Theory of Operation

2-1. INTRODUCTION

This section of the manual describes the theory of operation of the Fluke 51 and 52 K/J Thermometers. The main features of the 51/52 are first presented at an overall functional level, followed by a detailed description using the schematic diagrams for reference. Instrument control and calibration modes are also discussed in this section. These modes may be used during performance testing and during calibration of the units.

2-2. FUNCTIONAL OVERVIEW

The Fluke 51 and 52 K/J Thermometers take nonlinear voltages from thermocouples and convert the voltages to meaningful temperature readings. These thermometers are actually microvoltmeters with additional features to compensate for the reference junction and non-linearities of thermocouples.

The heart of these instruments is an analog-to-digital converter (a/d converter) that develops a numerical representation of an analog voltage. The a/d converter (U1) works in the range of -10 mV to +55 mV. For the Fluke 52, three signals must be measured: thermocouple 1, thermocouple 2, and the signal that represents the temperature of the reference junctions. To measure the three signals, the a/d converter is connected to each of these signals one at a time. A microcomputer (U2) coordinates the switching and a/d activity performed by U1. U2 also interprets the numbers sent by the a/d converter, including reference junction compensation, linearization, and degrees Celsius and Fahrenheit conversion. U2 also monitors the instrument control buttons and drives the liquid crystal display (LCD). See Figure 2-1 for a functional overview of the 51 and 52.

2-3. DETAILED DESCRIPTION

The following information describes the 51 and 52 K/J Thermometers simultaneously. Refer to the schematic diagrams in Section 6 while reading this description.

NOTE

Reference designations used here, such as "R7,13" mean that R7 appears on both the 51 and 52 instruments, and R13 appears only on the 52 dual thermocouple instrument.

2-4. Power Supply and Switching

Vdd is the positive terminal of the battery. When the instrument is turned on (ON/OFF and U4 pin 4), Vss is regulated by an on-board regulator consisting of Q2, Q3, CR7, R31 and R32. The output of the regulator, Vss, is provided to pin 46 of U1. A "common" voltage of approximately 3.1V below Vdd is generated by pin 14 of U1. This Vdd-common voltage provides the power supply for the microcomputer (U2), the band gap reference (VR1), and the reference junction sensor (Q1). C8 provides compensation and bypassing for the Vdd-to-common regulator. U1 (pin 46) and U4 (pin 4) are the only components that use Vss. Vss-to-common changes as the battery discharges, whereas Vdd-to-common is regulated and does not change (except slightly with ambient temperature changes).

U4 and its surrounding components form two toggle flip-flops that function as instrument power switching and F/C display control button memory. Pin 4 of U4, controlled by the ON/OFF button, provides the input to the Vss regulator consisting of Q2, Q3, CR7, R31 and R32. The output of

this regulator, V_{ss} , is provided to U1 pin 46. Pin 11 of U4 signals U1 (which in turn signals U2) indicating whether degrees Fahrenheit or Celsius is chosen by the user. The F/C flip-flop state is maintained, and cannot be changed, when the instrument is turned off. C5 and C6 provide a reverse charge to change the state of the F/C and on/off flip-flops when the buttons are depressed. C4 ensures that the F/C flip-flop does not change when the instrument is turned on or off. C13 ensures that the instrument does not turn on or off when the thermocouples experience an electrostatic discharge.

R23 and R24 provide an intermediate voltage level for the multiplexed LCD drive signals.

2-5. Analog Circuitry

NOTE

In the following text, TnLO refers to either T1LO or T2LO, TnHI refers to either T1HI or T2HI, etc.

Each thermocouple connection to U1 consists of four pins (refer to the schematics and the block diagrams). TnLO ties the low side of the thermocouple to instrument common. TnHI connects the high-side thermocouple input to the positive-sensed a/d converter input. TnPU provides approximately 70 mV to a 22-M Ω pull-up resistor (R2,8) to force the a/d converter into overload if the thermocouple is open or not plugged in. R19 and R20 provide the pull-up voltage source, approximately 70 mV. The VPU input, pin 35 on U1, is connected internally to TnPU when the particular thermocouple

input is being read by U1. R7,13 provide small offset voltages to the TnOS input(s) to compensate for slight errors in thermocouples being used. The range of adjustment as seen by TnOS is approximately 0.4 mV.

The TnPU, TnHI, TnLO, and TnOS pins on U1 are continuously switched signals from within U1. When U1 is commanded by U2 to read a thermocouple input, a switch on each of the four pins closes, and the thermocouple is connected to the a/d converter. When U1 is measuring another signal (i.e., the other thermocouple or the reference junction temperature sensor), U1 opens all four switches and effectively allows the thermocouple to float within a positive limit controlled by the clamp voltage (approx. 1.23V) at pin 32 of U1. Voltages greater than 1 volt that are applied between two thermocouples (Fluke 52) can cause improper instrument operation. If this voltage exceeds 60V dc or 24V ac, the instrument can be damaged. R3,9 and R4,10 provide current limit protection.

Pins 4 through 9 of precision resistor network Z1 divide down VR1 reference voltage (approximately 1.23V) and provide various stable voltages to generate V_{dd} -common, establish the a/d reference voltage, and form part of the reference junction temperature-sensing circuit as described below.

Q1 is thermally connected to, but electrically isolated from, the reference junction(s) at the input connector(s). The voltage across the base and emitter is about 567 mV at 25°C, and becomes smaller as temperature increases

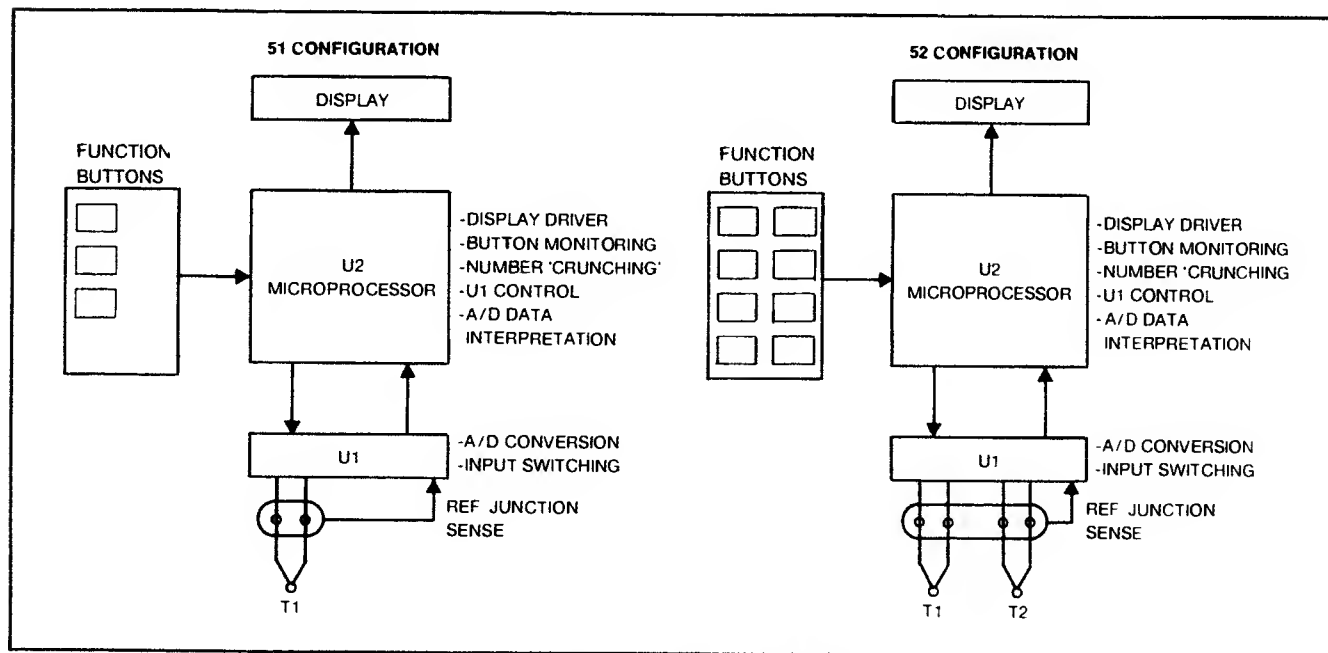


Figure 2-1. Functional Overview

(about $-2.24 \text{ mV}/^{\circ}\text{C}$). The voltage is divided down by R17 and R18 and applied to RJS LO (482 mV at 25°C and $-1.90 \text{ mV}/^{\circ}\text{C}$). Another temperature-stable voltage that matches the voltage divided by R17 and R18 when Q1 is at room temperature (482 mV at 25°C) is available from pin 6 of Z1, and is tied to RJS HI. RJS LO and RJS HI are measured by the a/d converter inputs when U2 commands U1 to read the reference junction temperature. R16 adjusts the current through Q1 for calibration of the reference junction sensing circuit.

C10 is the dual slope integrator capacitor, C11 is the auto-zero capacitor, and pins 1, 2, and 3 of Z1 form the integrate-ranging resistors.

2-6. Digital Circuitry

Crystal Y1 is the frequency-determining element for the instrument's clock source that is generated in U1. The clock signal is used by both U1 and U2 and appears on pin 56 of U1 and pin 12 of U2.

C7 resets the microcomputer when the instrument is turned on.

Connections leaving U1 called D0, D1, D2, D3 and A0, A1, A2, A3 are the data and address buses that form the communications link between U1 and U2. NRd, NWR, and NDAV are data-direction and data-availability signaling lines.

The pins labeled B0, B1, and B2 on U1 communicate operation modes to the instrument and are read just after the instrument is turned on. B0 controls display resolution and is strapped (or not strapped) to Vdd by R22, or is actuated by the elastomeric switch grid labeled TP0. B1/TP1 brings up the TC CAL (Thermocouple Calibration) mode that allows easy calibration of R7,13 initially (offset adjustments for each thermocouple channel), and allows easy calibration of R21, the a/d converter reference adjust (overall scaling adjustment). B2/TP2 brings up the RJS CAL (Reference Junction Sensor Calibration) mode and allows easy calibration of R16. The pin labeled B3 is read continuously during operation and is the F/C display control. If degrees Celsius ($^{\circ}\text{C}$) is selected, B3 is pulled to Vdd through CR6. CR6 blocks battery drain if degrees Fahrenheit ($^{\circ}\text{F}$) is selected when the instrument is turned OFF.

2-7. INSTRUMENT CONTROL MODES

The operation of the instrument can be altered to change default modes and access calibration functions.

2-8. Secondary Functions

The operation of the instrument may be modified by holding down the following buttons, or any combination of buttons, as the instrument is turned on. Holding down any of the buttons listed below holds all of the display segments on until the button(s) are released, which allows time to inspect the display. The full display is held on longer than the normal "self-test" display flash, indicating the unit has recognized a request for the secondary function (see Operator's Manual).

| | |
|------|---|
| T1 | Overrides resolution as selected by the absence or presence of R22. |
| T2 | Enter Scan Mode. |
| HOLD | Overrides thermocouple type as selected by the absence or presence of W1. |

The following is a list of strapped options.

| | |
|-----|---|
| W1 | When installed, the microprocessor linearizes for K-type thermocouples. If the jumper is cut or removed, J-type linearization is used unless this action is reversed by pressing HOLD during power-on. |
| R22 | When installed, the microprocessor causes the display to show 0.1°C or 0.2°F resolution. If the jumper is cut or removed, 1° resolution is displayed for both F and C unless this action is reversed by holding down T1 during power-on. |

2-9. Calibration Modes

In the normal operating mode, the reference junction signal is measured every 13 to 20 seconds (depending on how many thermocouples are being used on the 52, and always about 13 seconds on the 51). Thermocouple samples are combined with the reference junction samples to give a display reading. It is desirable to separate the effects of these separate readings for calibration and troubleshooting purposes. Two modes are available for these purposes (TC CAL mode and RJS CAL mode).

To enter these modes, it is necessary to short the TP1 or TP2 switch grid near the ON/OFF switch grid on the printed circuit assembly (pca) with the front cover of the instrument removed. Otherwise, these modes are activated in the same manner as the secondary functions of the user button. However, the display test interval does not stay frozen while the connection is held on test points TP1 or TP2. Because of this, it is not immediately obvious that you are in a calibration mode.

CAUTION

When shorting out the switch grids, use only the soft conductive pads supplied with the service manual and called out in the required equipment list. Hard metal tools should not be used to touch the switch grid as they may damage the pca and switch contact points.

The following is a list of the test points and their functions.

- | | |
|-----|--|
| TP0 | Not effective if R22 is installed. Brings up high resolution for calibration purposes if R22 is not installed. |
| TP1 | (TC CAL mode) Offset potentiometer(s) (R7, 13) and a/d |

reference (R21) calibration. The thermocouple inputs are the only signals that affect the display in this mode.

In this mode, the reference junction circuit compensation is ignored; the microcomputer simulates the reference junction circuit at room temperature.

TP2 (RJS CAL mode)

Reference Junction Sensor Calibration (R16). Since the thermocouple inputs are ignored in this mode, the reference junction compensation can be calibrated without interference from the thermocouple inputs.

In this mode, the thermocouple inputs are ignored; the microcomputer simulates zero output from the thermocouples.

Section 3 Maintenance

WARNING

THESE SERVICE INSTRUCTIONS ARE FOR USE BY QUALIFIED PERSONNEL ONLY. TO AVOID ELECTRIC SHOCK, DO NOT PERFORM ANY SERVICING OTHER THAN THAT CONTAINED IN THE OPERATOR'S MANUAL UNLESS YOU ARE QUALIFIED TO DO SO.

3-1. INTRODUCTION

This section contains maintenance information for the Fluke 51 and 52 K/J Thermometers, including performance tests, calibration, general maintenance procedures, and troubleshooting. For operator maintenance and instrument specifications, refer to the Operator's Manual.

The performance tests are recommended as a preventive maintenance tool to verify proper instrument operation. A one-year calibration cycle is recommended to maintain the specifications given in the Operator's Manual.

3-2. SERVICE INFORMATION

The Fluke 51 and 52 are warranted for a period of 3 years upon shipment of the instrument to the original purchaser. Conditions of the warranty are described on the registration card. Malfunctions that occur within the limits of the warranty will be corrected at no cost to the purchaser. For in-warranty service, ship the instrument post-paid to the Fluke Service Center nearest you. A list of service centers is included at the back of the Operator's Manual provided with the instrument at the time of purchase.

Fluke Service Centers are also available for calibration or repair of instruments that are beyond the warranty period. Upon request, a cost estimate will be provided before work is performed on instruments that are beyond the warranty period.

For application or operation assistance or information on Fluke products, call:

800-44-FLUKE (800-443-5853) in U.S.A. and Canada
31 40 723-220 in Europe
206-356-5500 from other countries

If reshipment is necessary, please use the original shipping container. If the original container is not available, be sure that adequate protection is provided to prevent damage during shipment. It is recommended that the instrument be surrounded by at least 3 inches of shock-absorbing material in the shipping container.

3-3. GENERAL MAINTENANCE

3-4. Instrument Disassembly

WARNING

TO AVOID ELECTRICAL SHOCK, REMOVE THERMOCOUPLES BEFORE OPENING THE CASE, AND CLOSE THE CASE BEFORE OPERATING THE METER.

CAUTION

To avoid contaminating the pca with oil from the fingers, handle it by the edges or wear gloves. PCA contamination may not cause immediate instrument failure in controlled environments. Failures typically show up when contaminated units are operated in humid areas.

Use the following procedure for removing the pca from its case.

1. Turn the instrument off and remove the thermocouples.
2. Remove the four case screws from the bottom cover with a #2 Phillips screwdriver.
3. Turn the meter face up, grasp the top cover, and pull the top cover from the meter.
4. Remove the Phillips screw that holds the pca to the back cover.
5. The pca may now be removed from the bottom cover.

CAUTION

To prevent damage to the case, care should be taken when reassembling the unit to not over-torque the screws (6 to 7 inch pounds is sufficient).

3-5. Display Access

CAUTION

Do not handle the conductive edges of the LCD or LCD interconnects. If the edges are contaminated, clean them with alcohol.

While referring to Figure 3-1, use the following procedure to remove the LCD from the display holding bracket.

1. Remove the four Phillips screws from the back side of the pca.

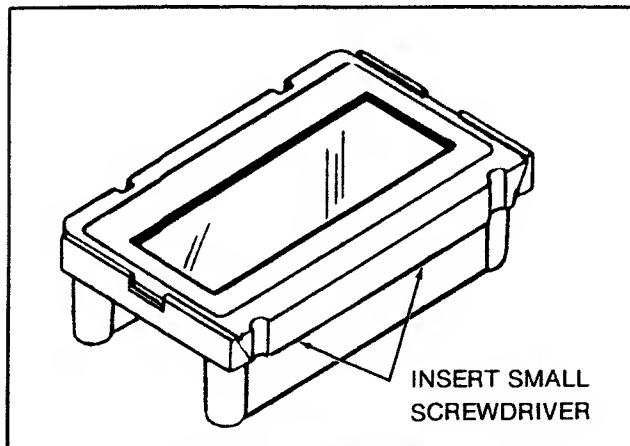


Figure 3-1. Display Assembly

2. Remove the LCD mounting bracket.
3. Insert a small screwdriver under the edges of the display holding bracket, and gently pry the bracket loose from the snaps.
4. Turn the bracket upside down to remove the LCD.
5. Before installing a new LCD, make sure that all connector contact points are clean.

3-6. Cleaning

CAUTION

To avoid damaging the meter, do not use aromatic hydrocarbons or chlorinated solvents for cleaning. These solutions will react with the plastics used in the instrument.

Do not allow the liquid crystal display to get wet. Remove the display assembly before washing the pca, and do not install until the pca is completely dry.

Do not use detergent of any kind for cleaning the pca.

Avoid removal of lubrication from the thermocouple connectors when cleaning the pca.

To relubricate the thermocouple connectors, slide the white isothermal block up and off the metal connectors. Apply a conservative amount of Amoco Rykon® PN 344572, Premium Grease, type EP-2, on the side of the connectors nearest the battery as shown in Figure 3-2.

Clean the instrument case with a mild detergent and water.

The pca may be washed with isopropyl alcohol or deionized water and a soft brush. Remove the display assembly before washing. Dry with clean dry air at low pressure and then bake at 50°C for 24 hours.

3-7. PERFORMANCE TEST

The following procedure refers to the Fluke 51 or 52 instruments as the Unit Under Test (UUT).

Performance tests are recommended for incoming inspection, periodic maintenance, and for verifying the specifications in the Operator's Manual. If the instrument fails any part of the test, calibration and/or repair is indicated.

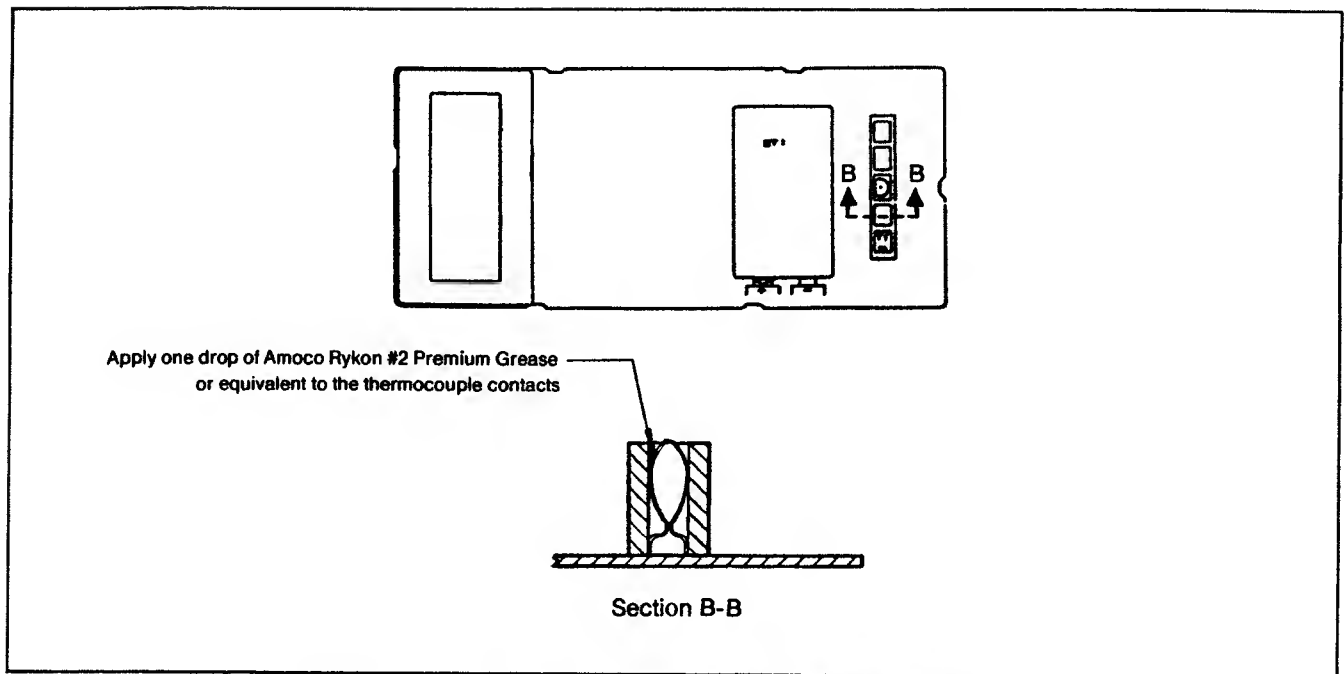


Figure 3-2. Lubricating the Thermocouple Connectors

3-8. Initial Procedure

Use the following procedure to prepare the UUT before beginning the Performance Tests or Calibration Procedures.

1. Allow the UUT to stabilize to room temperature, $23^{\circ}\text{C} \pm 5^{\circ}\text{C}$ ($73^{\circ}\text{F} \pm 9^{\circ}\text{F}$).
2. Check the battery and replace it if necessary.

3-9. Display Test

Turn the instrument on while continuously pressing the HOLD button. Check that all the display segments come on as shown in Figure 3-3. The entire display stays on as long as the HOLD button is pressed.

NOTE

Since pressing the HOLD button during power-up activates one of the instruments secondary functions (see Secondary Functions in Section 2-8), take care to return the instrument to its normal function (if required).

3-10. WIDE RANGE PERFORMANCE TEST PROCEDURE

The performance test listed here verifies instrument performance to its specifications. This test may be used for initial acceptance, for verifying calibration, or as an aid in troubleshooting. If the thermometer fails to meet

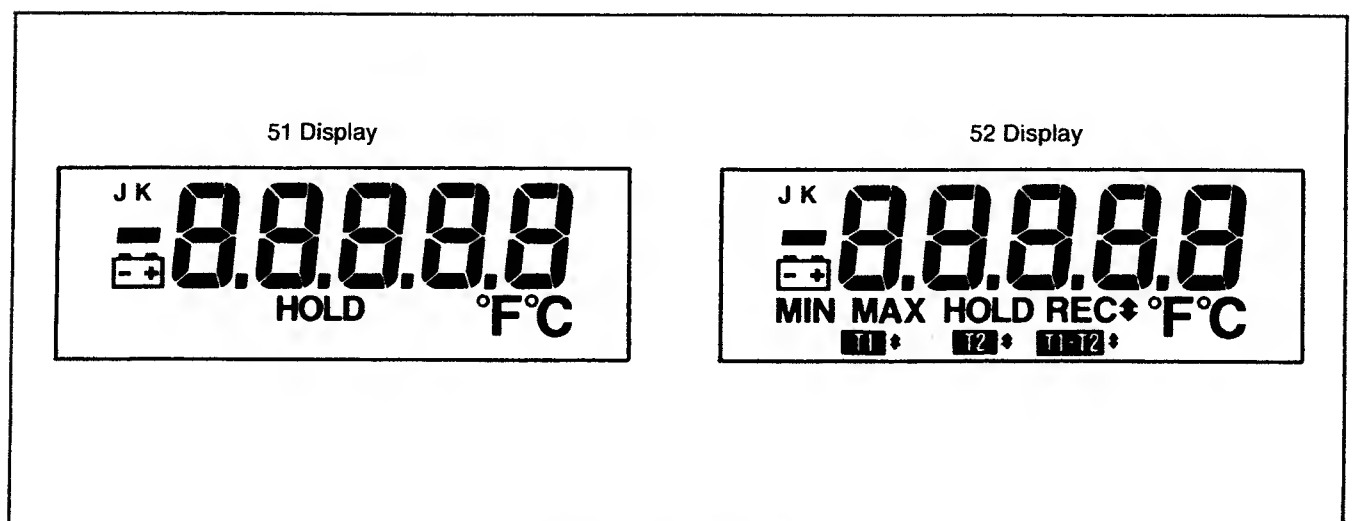


Figure 3-3. Display Test

specifications in this test, the calibration adjustment procedure or troubleshooting should be performed as determined by qualified personnel.

Test equipment required for the performance test and calibration is listed in Table 3-1. If the recommended equipment is not available, instruments with equivalent specifications may be used. The test should be conducted with an ambient temperature of $23^{\circ}\text{C} \pm 5^{\circ}\text{C}$ ($73^{\circ}\text{F} \pm 9^{\circ}\text{F}$).

3-11. Ice Bath Construction

To begin the Performance Test, first construct an ice bath using the following steps.

1. Prepare a Dewar Flask by drilling two holes in its cap to accept the thermometer and thermocouple wires, or use a standard laboratory cork.
2. Fill the Dewar Flask with shaved or crushed ice made from distilled water.
3. Fill the Dewar Flask with enough distilled water so that the ice becomes slush, but do not add enough water to float the ice.

NOTE

As the ice melts, siphon off the excess water and add more ice. Allow approximately 5 to 10 minutes for the water to drop back to the freezing point.

4. Replace the Dewar Flask cap or cork, and insert thermocouple wires as shown in Figure 3-4.

3-12. Ice Bath Test

Use the following procedure to test the instrument. This test should be conducted on both thermocouple inputs on the 52.

1. Connect the equipment as shown in Figure 3-4.
2. Insert the Mercury Thermometer to the same depth as the thermocouple wires, verify that the Ice Bath temperature is $0.0^{\circ}\text{C} \pm 0.3^{\circ}\text{C}$.
3. Short (or apply 0 mV) to the copper wires at the 5440A Calibrator.
4. Verify that the UUT reads $0.0^{\circ}\text{C} \pm 0.4^{\circ}\text{C}$.

Table 3-1. Recommended Test Equipment

| TEST EQUIPMENT | REQUIRED CHARACTERISTICS | RECOMMENDED MODEL |
|---|---|--|
| DMM | DC Voltage Accuracy: 0.5% | Fluke model 8060A |
| Temperature Probe | Accuracy: Certified to $\pm 0.2^{\circ}\text{C}$ ambient | Fluke Model 80T-150U |
| DC Voltage Calibrator | Output Voltage 0 to 10V Accuracy: 0.002% Resolution: 10 μV | Fluke 5440A |
| Elastometer Switch Pad | | Fluke P/N 680686 |
| Thermocouple Connector | For K-type thermocouple | Fluke 80CK-M |
| Thermocouple Wire (K or J Type) | | Omega |
| Dewar Flask/Cap | 1-pint capacity | Thermos |
| Mercury Thermometer (either $^{\circ}\text{C}$ or $^{\circ}\text{F}$) | 0.02 $^{\circ}\text{C}$ resolution 0.05 $^{\circ}\text{F}$ resolution | Princo Model ASTM56C Princo Model ASTM56F |

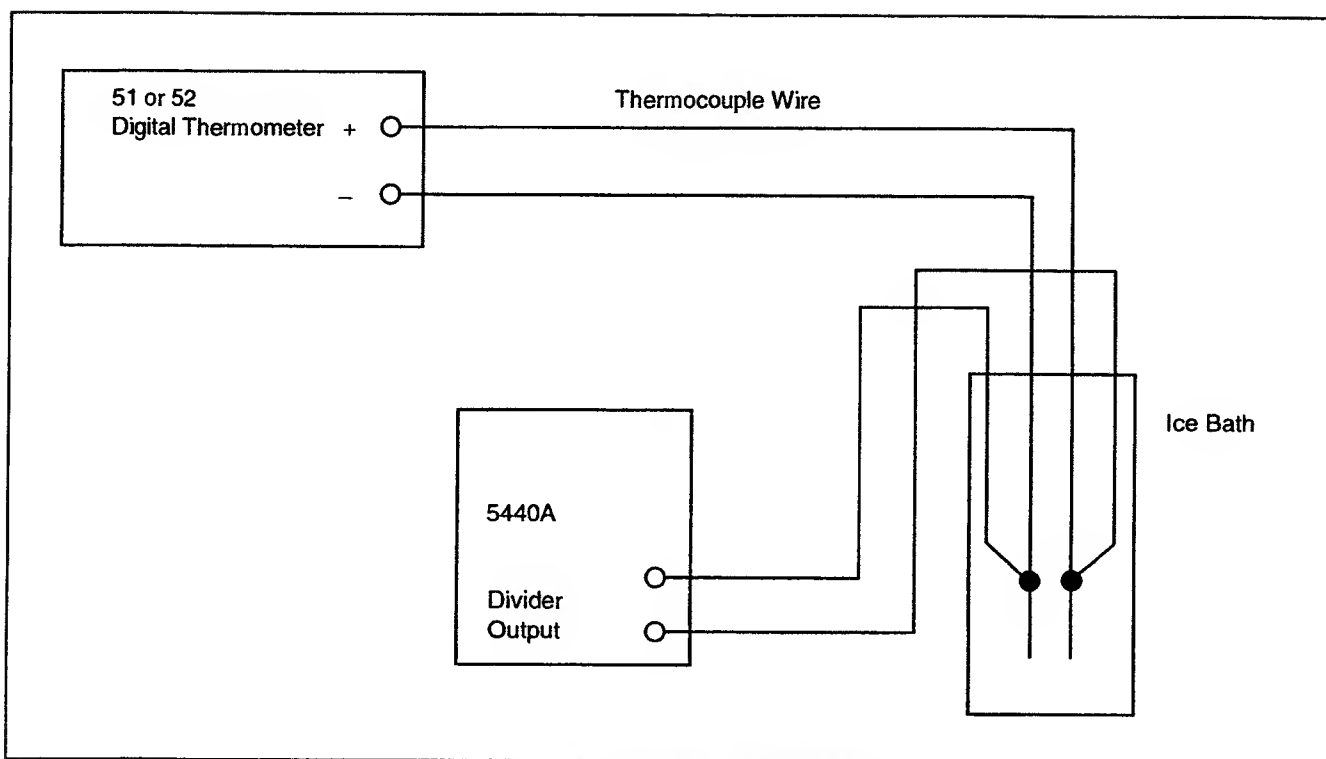


Figure 3-4. Equipment Connections

Table 3-2. Performance Test Values

| THERMOCOUPLE TYPE | INPUT VOLTAGE (mV DC) | DISPLAY READING | |
|----------------------|--------------------------|--------------------|--------------------|
| | | DEGREES C | DEGREES F |
| K | -5.587 | -182.0 \pm (0.9) | -295.6 \pm (1.6) |
| K | -3.211 | -89.0 \pm (0.8) | -128.2 \pm (1.4) |
| K | 21.919 | 530.0 \pm (1.2) | 986.0 \pm (2.3) |
| K | 54.297 | 1355.0 \pm (2.1) | 2471.0 \pm (3.8) |
| J | -7.824 | -197.0 \pm (1.0) | -322.6 \pm (1.7) |
| J | 13.997 | 258.0 \pm (1.1) | 496.4 \pm (1.9) |
| J | 39.442 | 705.0 \pm (1.5) | 1301.0 \pm (2.7) |

If this test fails, reposition the thermocouple wires and Mercury Thermometer in the Ice Bath and repeat Step 2-4. If the test continues to fail then perform the Calibration Procedure, earlier in this section.

- Remove the short applied in step 3.
- Using Table 3-2 (for the corresponding thermocouple type), obtain a divided output from the 5440A equal to the first value of the "Input Voltage (mVDC)" column, and verify that the UUT reads within the limits specified.
- Repeat step 2 for the remaining voltages in the "Input Voltage (mVDC)" column.

- Disconnect the thermocouple from the input terminals. This completes the Ice Bath Test.

3-13. CALIBRATION PROCEDURE

The following procedure refers to the Fluke 51 or 52 instruments as the Unit Under Test (UUT).

CAUTION

When you are directed to short a switch grid below, use only the elastomeric switch pad that is supplied, as pca damage could occur if a hard tool is used.

Wire the Thermocouple Connector to the 5440A with a length of ordinary 22-gauge wire. Polarity is important, so connect the positive side to the narrow thermocouple blade and the negative side to the wide blade. When using this connector with the UUT case top removed, make sure that the wide blade is oriented the same as the case top would normally allow. Connect the equipment as shown in Figure 3-5.

3-14. Instrument Calibration

Use the following procedure to calibrate the 51 and 52 K/J Thermometers.

1. Turn UUT off and remove the top case leaving the pca in the bottom case.
 2. Simultaneously short the TP1 grid and turn on the UUT by shorting the ON/OFF switch grid. Hold the elastomeric switch pad on TP1 for at least 3 seconds after turn on. This puts the UUT into the Thermocouple Calibration mode.
 3. Allow the UUT to stabilize at room temperature, $23^{\circ}\text{C} \pm 5^{\circ}\text{C}$ ($73^{\circ}\text{F} \pm 9^{\circ}\text{F}$).
 4. Select $^{\circ}\text{C}$ mode. Select T1 if the UUT is a Fluke 52.
 5. Adjust the 5440A for 0.00000V. Connect the 5440A divider output to the TP1 input.
 6. Allow the meter reading to settle and then adjust the T1 offset adjustment (R7) for a display reading of $25.2^{\circ}\text{C} \pm 0.1^{\circ}\text{C}$.
- Skip the next two steps if you are calibrating the Fluke 51.
7. Leave the 5440A adjusted for 0.00000V. Connect the 5440A divider output to the T2 input and select the T2 function.
 8. Allow the reading to settle and adjust the T2 offset adjustment (R13) for a display reading of $25.2^{\circ}\text{C} \pm 0.1^{\circ}\text{C}$.
 9. Adjust the 5440A for 53.807 mV output (5.3807V on the 343A).
 10. Allow the reading to settle and adjust (R21) for a display reading of $+1370.0^{\circ}\text{C} \pm 0.4^{\circ}\text{C}$.
 11. Disconnect the UUT from the 5440A. Power down the UUT by shorting the ON/OFF switch grid.
 12. With an elastomeric switch pad in both hands, use the left one to short out the TP2 grid, and use the right one to first turn on the instrument and then quickly short out the VIEW switch grid. Hold this position until the display is held in self-test. This puts the UUT into the Reference Junction Sensor calibration mode, and the VIEW

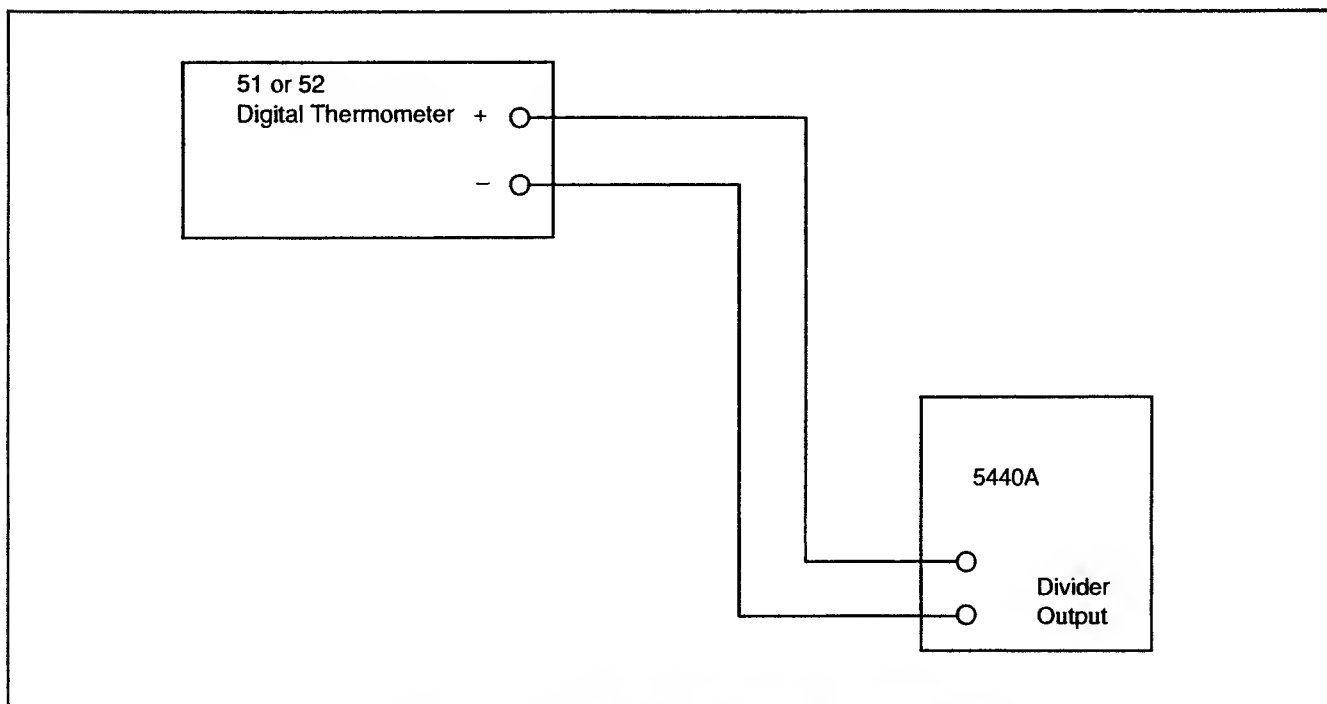


Figure 3-5. Calibration Adjustment Connections

maneuver turns off a filter so that the reading settles immediately.

13. Using the 80T-150U and the 8060A DMM, measure the reference junction transistor temperature by placing the 80T-150U probe tip against Q1, located in the middle hole of the isothermal block. Wait for the temperature reading to stabilize.
14. Adjust R16 for a temperature reading that is the same as displayed on the 8060A DMM.
15. Power down the UUT and reassemble.

The following steps optimize the UUT performance in the negative temperature range.

16. Put the UUT in normal operating mode. Normal operation can be achieved by turning the UUT OFF and then ON. No other UUT buttons should be pressed during the power cycle operation.
17. Insert a known good thermocouple in an Ice Bath (See Ice Bath Construction, earlier in this section).
18. Insert the Mercury Thermometer to the same depth as the thermocouple wires, verifying the Ice Bath temperature is $0.0^{\circ}\text{C} \pm 0.3^{\circ}\text{C}$.

19. Connect the other end of the thermocouple wire to the T1 input of the UUT and allow the instrument reading to settle.

20. Slowly and in small graduations, adjust R7 (T1 OFFSET) until the UUT reading matches the Mercury Thermometer reading. Allow the UUT reading to settle and repeat the adjustment as necessary until a stable and correct reading can be attained.

21. Repeat Steps 19 and 20 for the R13 (T2 OFFSET, Fluke 52 only).

3-15. Thermocouple Input Calibration

Perform the thermocouple input calibration using the following procedure.

NOTE

This procedure optimizes the 51 or 52 for measurement with a specific thermocouple.

1. Construct an ambient temperature lag bath as shown in Figure 3-6.
2. Connect the thermocouple to the 51/52 input terminals. Select the applicable switch position (T1 or T2) and temperature scale ($^{\circ}\text{C}$ or $^{\circ}\text{F}$). Insert the probe into a room temperature lag bath.

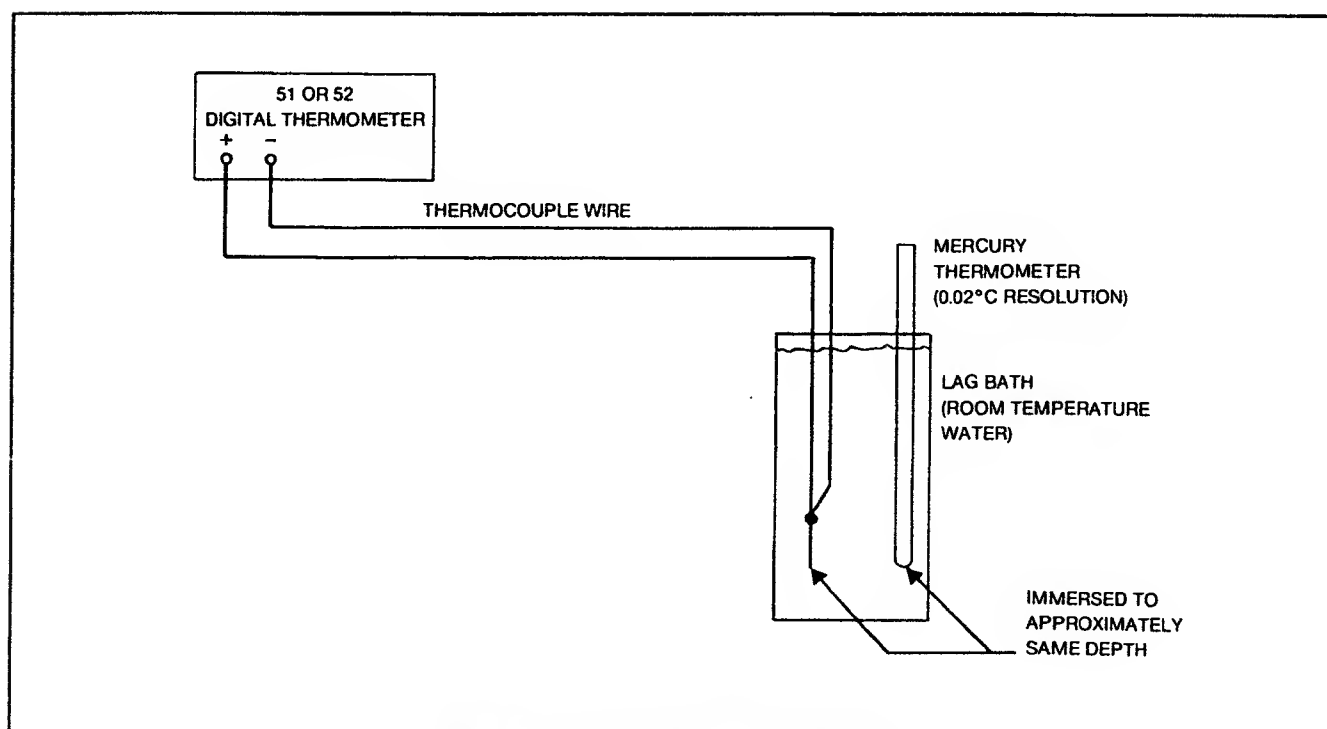


Figure 3-6. Room Temperature Lag Bath

3. Allow the system to stabilize, then adjust T1 or T2 offset adjustments for a temperature display equal to the reading of the lag bath reference thermometer.
4. Calibration of the 51/52 is complete. Disconnect all test equipment from the instrument.

3-16. TROUBLESHOOTING

CAUTION

Static discharge can damage CMOS components U1, U2, and U4. Follow the handling precautions given previously for static-sensitive components. Never remove or install components without first disconnecting all inputs to the instrument.

3-17. Introduction

If the pca must be removed from the instrument, the board should be handled by the edges or the LCD bracket. This prevents improper operation due to electrical leakage caused by body fluids and salts. After any repair operation, the pca assembly must be cleaned by the procedure outlined in Section 3-6.

When the instrument is powered on, an approximate 1-second delay occurs during the microcomputer reset interval. After that, a short (1/3 second) period occurs that forces all LCD segments to appear while an internal self-test occurs. Secondary functions are also sought by the microprocessor during the power-on sequence, such as

alternate thermocouple type, alternate resolution, scan mode, TC calibration mode, and RJS calibration mode.

If the A/D converter within U1 is nonfunctional or if C10, C11 and Z1 are nonfunctional, the entire display flashes up to eight times as the instrument attempts to pass the A/D Self-Test. The instrument then exits the self-test phase and attempts to establish normal operation.

If a problem occurs, check the Operator's Manual to ensure proper operating procedures. If there is still a problem with the instrument, continue on with this section.

If U1 or U2 is defective, replacement should be left to experienced personnel. Service information is contained in Section 3-2 of this manual. For information on how to order replacement parts, refer to How To Obtain Parts in Section 4-2 of this manual. To obtain shipping information refer to the list of Fluke Service Centers in the Operator's Manual provided with the instrument at the time of purchase.

3-18. Fault Diagnosis Guide

A fault guide for the 51 and 52 K/J Thermometers is given in Table 3-3. This guide can be helpful in isolating troubles to a component area. Unless otherwise specified, make all voltage measurements with respect to instrument common. Common is generated by U1 at pin 14 (COM).

3-19. Using Calibration Modes for Troubleshooting

In the normal operating mode, the instrument obtains a reading from the combinations of the reference junction signal and the thermocouple signals. However, when troubleshooting, sections of the circuitry can be isolated.

Use TP1 to enter the TC CAL mode to eliminate the effect of the reference junction signal on the reading. In this mode, the reference junction compensation circuit is ignored; the microcomputer simulates the reference junction circuit as it would be at room temperature.

An example of the use of this mode is when the instrument displays an error indication (as shown in Figure 3-7) for T1, T2, and T1-T2. This may imply that the instrument is outside the allowable ambient operating temperature window (just below 0°C to just above 50°C). However, this display around room temperature either indicates all

thermocouples are open or the reference junction circuit is malfunctioning. If the TC CAL mode is selected and the readings are roughly correct and responsive to changes in thermocouple temperature, then the reference junction circuit may be malfunctioning.

Use TP2 to enter the RJS CAL mode to eliminate the effect of the thermocouple signals. This mode samples the reference junction more often than normal, which shortens the time between readings to show the immediate effect of an adjustment (normally up to 20 seconds).

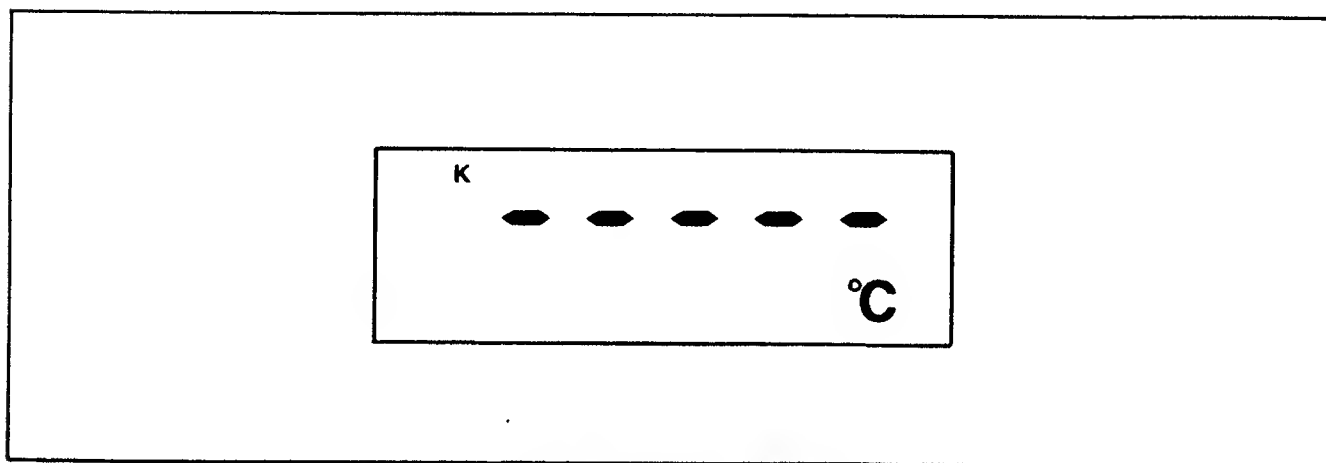


Figure 3-7. Error Indication

Table 3-3. Fault Guide

| SYMPTOM | POSSIBLE CAUSE | ACTION |
|--|---|---|
| No display; unit fails to turn on | Dead battery. U1 not generating Vcom. U4 defective. | Make sure CR5 is not shorted and that CR6 is not leaky. Check (+) side of battery relative to common for approximately 3.1V at room temperature (common appears on the grid pattern under the battery, VR1, pin 14, 15, and 16 of U1, etc.) Check to see if U4 is operating; pin 4 of U4 should toggle as pin 8 is momentarily shorted to the juncture of C6, R26. Also check C6, R26, and R27. |
| Absent or dim and inactive display | Very low battery (the battery symbol should be visible on the display). No clock. | Replace the battery. Check for approximately 32768 Hz, 3V peak-to-peak square-wave on U2 pin 12. If no signal is found, look for evidence of 32768 Hz on pin 54 of U1 and a lower level signal on pin 52 of U1. Also check U1, Y1, or C3. |
| Some segments are missing on the display | Contamination of LCD interconnects at pca or LCD (U3). Defective LCD. Defective U2. Damaged LCD interconnect. | Look for debris trapped under elastomeric interconnect. Clean as described in Section 3-6. Replace the LCD. Check for activity on U2 output strobes to the LCD. Examine interconnect and contacts for contaminants. Clean per Section 3-6. |
| Inaccurate readings | Damaged or open thermocouple. See if the wrong thermocouple type is installed or selected. Also see if the extension wire is of the proper thermocouple type. The thermocouple is installed backwards. If the measurement junction and the instrument are both at the same temperature, the reading appears to be correct. However, if the measurement junction is then heated, the meter shows a colder reading. Offset controls are misadjusted. | Replace the thermocouple. Refer to Table 1 in the Operator's Manual that describes how to identify thermocouple type and wire polarity. Refer to Table 1 in the Operator's Manual that describes how to identify thermocouple type and wire polarity. Recalibrate per Thermocouple Input Calibration in Section 3-15. |

Table 3-3. Fault Guide (cont)

| SYMPTOM | POSSIBLE CAUSE | ACTION |
|---------------------------|--|---|
| Inaccurate readings(cont) | <p>Low battery (the low-battery annunciator should be on).</p> <p>Instrument is out of calibration.</p> <p>U1, VR1, Q1, or Z1 is defective.</p> <p>PCA contaminated around U1 and/or thermocouple input area.</p> | <p>Replace the battery.</p> <p>Execute calibration procedure in Section 3-13.</p> <p>Make the following measurements with a Fluke 8060A in the Hi-Z 2V DC range. All voltages are with respect to pin 4 of Z1 (instrument common). With reference junction sensor calibrated, the base of Q1 should be 567 mV at 25°C. If VR1 is operating properly, pin 9 of Z1 should be 1.23V ($\pm 0.03V$). With R21 calibrated, pin 7 of Z1 should be 1.00V, pin 6 should be 482 mV ± 3 mV, and pin 5 should be 170 mV ± 1 mV.</p> <p>Clean per Section 3-6.</p> |
| Noisy or erratic readings | <p>Exceeds common mode voltage specifications.</p> <p>The thermocouple may be damaged.</p> <p>Offset potentiometers R7 and R13 are worn or defective.</p> <p>High level electromagnetic field possibly caused by a radio transmitter nearby.</p> <p>Battery is very low.</p> <p>U1, VR1, C10, C11, or Z1 is defective.</p> <p>PCA contaminated around U1 and/or thermocouple input area.</p> <p>R3,9; R4,10; or R5,11 input-protection resistors damaged.</p> <p>Pull-up resistor open (R2,8) and thermocouple is not plugged in or is open.</p> | <p>Check to ensure that the common mode voltage on any thermocouple is not beyond specification for the instrument. Use isolated thermocouples where the possibility of voltage differences between T1 and T2 (for the 52) is greater than 1 volt (see specifications in the Operator's Manual).</p> <p>Check the welded measurement junction (bead) on the thermocouple. Also check all connector hardware.</p> <p>Set up the 51/52 per Section 3-15 and rotate R7 and R13 to see if the display shows erratic readings.</p> <p>Eliminate the suspected source and allow at least 20 seconds for the instrument to recover. C1, C2, and C12 alleviate disturbances from such EMI sources.</p> <p>Replace the battery.</p> <p>Substitute parts.</p> <p>Clean per Section 3-6.</p> <p>Check resistance values, replace if necessary.</p> <p>Check resistance values, replace if necessary.</p> |

Table 3-3. Fault Guide (cont)

| SYMPTOM | POSSIBLE CAUSE | ACTION |
|---------------------------|--|---|
| No action from F/C button | U4 defective. Debris on switch grid. U1 defective. CR6 open. | Pin 11 of U4 should toggle as pin 1 is shorted to the juncture of R25-C5. The purpose of C4 is to ensure that the F/C flip-flop remains in the same state when the instrument is powered on and off. Clean per Section 3-6. Replace U1. Replace CR6. |
| Short battery life | High storage temperature. Batteries tend to self-discharge more rapidly when stored at elevated temperature. With the instrument ON, battery drain is approximately $350\ \mu\text{A}$ $\pm 50\ \mu\text{A}$ at room temperature. With the instrument OFF, battery drain is greater than $5\ \mu\text{A}$ at room temperature. | If high temperature storage is expected, use an alkaline-type battery, which exhibits longer shelf life than the carbon zinc type. Check U1 and U2 current drain. Check U4, CR5, and CR6 for leakage. |

Section 4

List of Replacement Parts

TABLE OF CONTENTS

| TITLE | TABLE | PAGE | FIGURE | PAGE |
|-------------------------------|-------|------|--------|------|
| Fluke 51 Final Assembly | 4-1 | 4-3 | 4-1 | 4-4 |
| Fluke 52 Final Assembly | 4-1 | 4-3 | 4-2 | 4-5 |
| Fluke 51 A1 Main PCA | 4-2 | 4-6 | 4-3 | 4-7 |
| Fluke 52 A1 Main PCA | 4-2 | 4-6 | 4-4 | 4-8 |

4-1. INTRODUCTION

This section contains an illustrated list of replaceable parts for the 51 and 52 K/J Thermometers. Parts are listed by assembly; alphabetized by reference designator. Each assembly is accompanied by an illustration showing the location of each part and its reference designator. The parts lists give the following information:

- Reference designator
- An indication if the part is subject to damage by static discharge
- Description
- Fluke stock number
- Manufacturers supply code (doe-to-name list at the end of this section)
- Manufacturers part number or generic type
- Total quantity
- Any special notes (i.e., factory-selected part)

CAUTION

A * symbol indicates a device that may be damaged by static discharge.

4-2. HOW TO OBTAIN PARTS

Electrical components may be ordered directly from the manufacturer by using the manufacturers part number, or from the Fluke Corporation and its authorized representatives by using the part number under the heading **FLUKE STOCK NO.** In the U.S., order directly from the Fluke Parts Dept. by calling 1-800-526-4731. Parts price information is available from the Fluke Corporation or its representatives. Prices are also available in a Fluke Replacement Parts Catalog which is available on request.

In the event that the part ordered has been replaced by a new or improved part, the replacement will be accompanied by an explanatory note and installation instructions, if necessary.

To ensure prompt delivery of the correct part, include the following information when you place an order:

- Instrument model and serial number
- Part number and revision level of the pca containing the part.
- Reference designator
- Fluke stock number
- Description (as given under the **DESCRIPTION** heading)
- Quantity

4-3. MANUAL STATUS INFORMATION

 
The Manual Status Information table that precedes the parts list defines the assembly revision levels that are documented in the manual. Revision levels are printed on the component side of each pca.

4-4. NEWER INSTRUMENTS

Changes and improvements made to the instrument are identified by incrementing the revision letter marked on the affected pca. These changes are documented on a supplemental change/errata sheet which, when applicable, is included with the manual.

4-5. SERVICE CENTERS

A list of service centers is located at the end of this section.

NOTE 

This instrument may contain a Nickel-Cadmium battery. Do not mix with the solid waste stream. Spent batteries should be disposed of by a qualified recycler or hazardous materials handler. Contact your authorized Fluke service center for recycling information.

MANUAL STATUS INFORMATION

| Ref or Option number | Assembly name | Fluke Part Number | Revision Level |
|----------------------|-------------------|-------------------|----------------|
| A1 | FLUKE 51 Main PCA | 778191 | J |
| A2 | FLUKE 52 Main PCA | 778209 | L |

Table 4-1. FLUKE 51 AND 52 FINAL ASSEMBLY
(SEE FIGURE 4-1.)

| REFERENCE DESIGNATOR | | | FLUKE STOCK | MFRS SPLY | MANUFACTURERS PART NUMBER | | N O T E |
|-------------------------|--------|--|----------------|--------------|------------------------------|-------------|------------------|
| -A>-NUMERICS-----> | S----- | DESCRIPTION----- | --NO-- | -CODE- | -OR GENERIC TYPE----- | TOT QTY- | -E- |
| A | 1 | * FLUKE 51 MAIN PCB | 778191 | 89536 | 778191 | 1 | |
| A | 1 | * FLUKE 52 MAIN PCB | 778209 | 89536 | 778209 | 1 | |
| BT | 1 | BATTERY, 9V, 0-15MA | 696534 | 59717 | 216 | 1 | |
| H | 1 | SCREW, PH, P, THD FORM, STL, 5-14, .750 | 733410 | 89536 | 733410 | 4 | |
| H | 2 | SCREW, PH, P, THD FORM, STL, 4-24, .250 | 519116 | 89536 | 519116 | 1 | |
| H | 6 | SCREW, PH, P, THD FORM, STL, 4-14, .375 | 448456 | 91662 | 448456 | 4 | |
| MP | 1 | FLUKE 51 CASETOP | 753251 | 89536 | 753251 | 1 | |
| MP | 1 | FLUKE 52 CASETOP | 749515 | 89536 | 749515 | 1 | |
| MP | 2 | FLUKE 51 CASE, BOTTOM (574798) | 769000 | 89536 | 769000 | 1 | |
| MP | 2 | FLUKE 52 CASE, BOTTOM (574798) | 749523 | 89536 | 749523 | 1 | |
| MP | 3 | SHIELD, MYLAR, BOTTOM | 761924 | 89536 | 761924 | 1 | |
| MP | 4 | FLUKE 51 SWITCH PAD, MOMENTARY | 744631 | 89536 | 744631 | 1 | |
| MP | 4 | FLUKE 52 SWITCH PAD, MOMENTARY | 744623 | 89536 | 744623 | 1 | |
| MP | 5 | SUPPORT, SWITCH | 749044 | 89536 | 749044 | 1 | |
| MP | 6 | FLUKE 51 WINDOW, LCD | 753350 | 89536 | 753350 | 1 | |
| MP | 6 | FLUKE 52 WINDOW, LCD | 749531 | 89536 | 749531 | 1 | |
| MP | 7 | SHAFT, TRIM | 749556 | 89536 | 749556 | 1 | 1 |
| MP | 8 | FOOT, NON-SKID | 640565 | 89536 | 640565 | 4 | |
| MP | 9 | BRACKET, LCD | 646653 | 89536 | 646653 | 1 | |
| MP | 10 | MASK, BRACKET | 642090 | 89536 | 642090 | 1 | |
| MP | 12 | BLOCK, ISOTHERMAL | 745794 | 89536 | 745794 | 1 | |
| MP | 14 | SHOCK ABSORBER | 428441 | 89536 | 428441 | 1 | |
| MP | 15 | CONN, ELASTOMERIC, LCD TO PWB, 1.900 L | 649632 | 0K392 | SG | 2 | |
| MP | 40 | LABEL, WINDOW FLUKE-PHILIPS | 844340 | 89536 | 844340 | 1 | |
| TC | 1, 2 | T/C ASSY, K-TYPE, BEADED, MOLDED-PLUG | 773135 | 93768 | C-SK-1401-1 | 1 | 2 |
| TM | 1 | FLUKE 51 OPERATOR MANUAL | 769026 | 89536 | 769026 | 1 | |
| TM | 1 | FLUKE 52 OPERATOR MANUAL | 764712 | 89536 | 764712 | 1 | |
| TM | 2 | FLUKE 51 OPERATOR, INTL. MANUAL | 791509 | 89536 | 791509 | 1 | |
| TM | 2 | FLUKE 52 OPERATOR, INTL. MANUAL | 791517 | 89536 | 791517 | 1 | |
| TM | 3 | PRINTED MATL. WARRANT CARD, FLUKE 51/52 | 784462 | 89536 | 784462 | 1 | |
| U | 3 | FLUKE 51 LCD, 5 DIGIT, TEMP, MULTIPLEXED | 742205 | 18520 | LF7208G | 1 | |
| U | 3 | FLUKE 52 LDC, 5 DIGIT, TEMP, MULTIPLEXED | 741314 | 89536 | 741314 | 1 | |

An * in 'S' column indicates a static-sensitive part.

NOTES: 1. FOR FLUKE 51, QTY = 1.
2. FOR FLUKE 51, QYT = 1 (TC1).

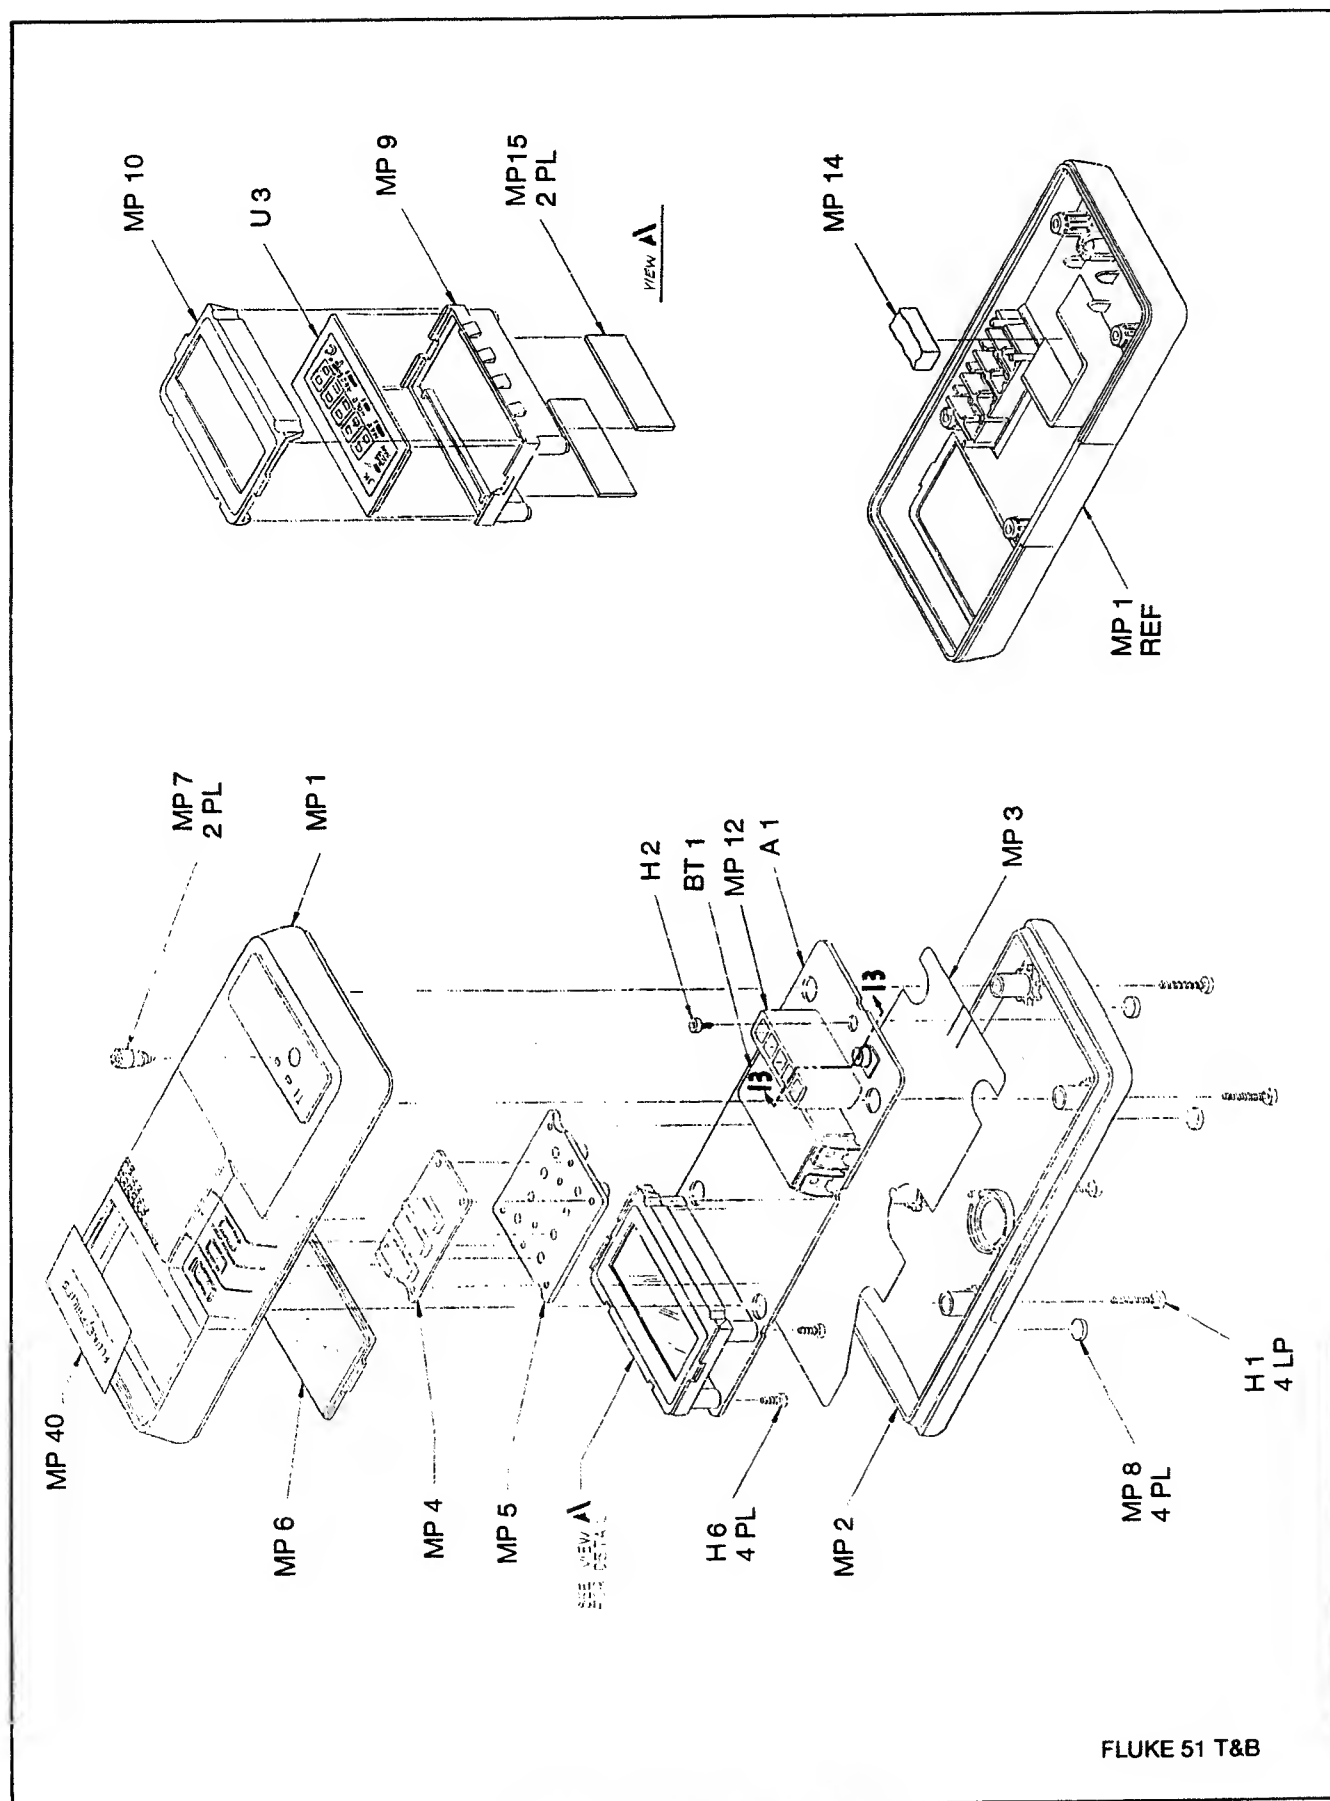


Figure 4-1. Fluke 51 Final Assembly

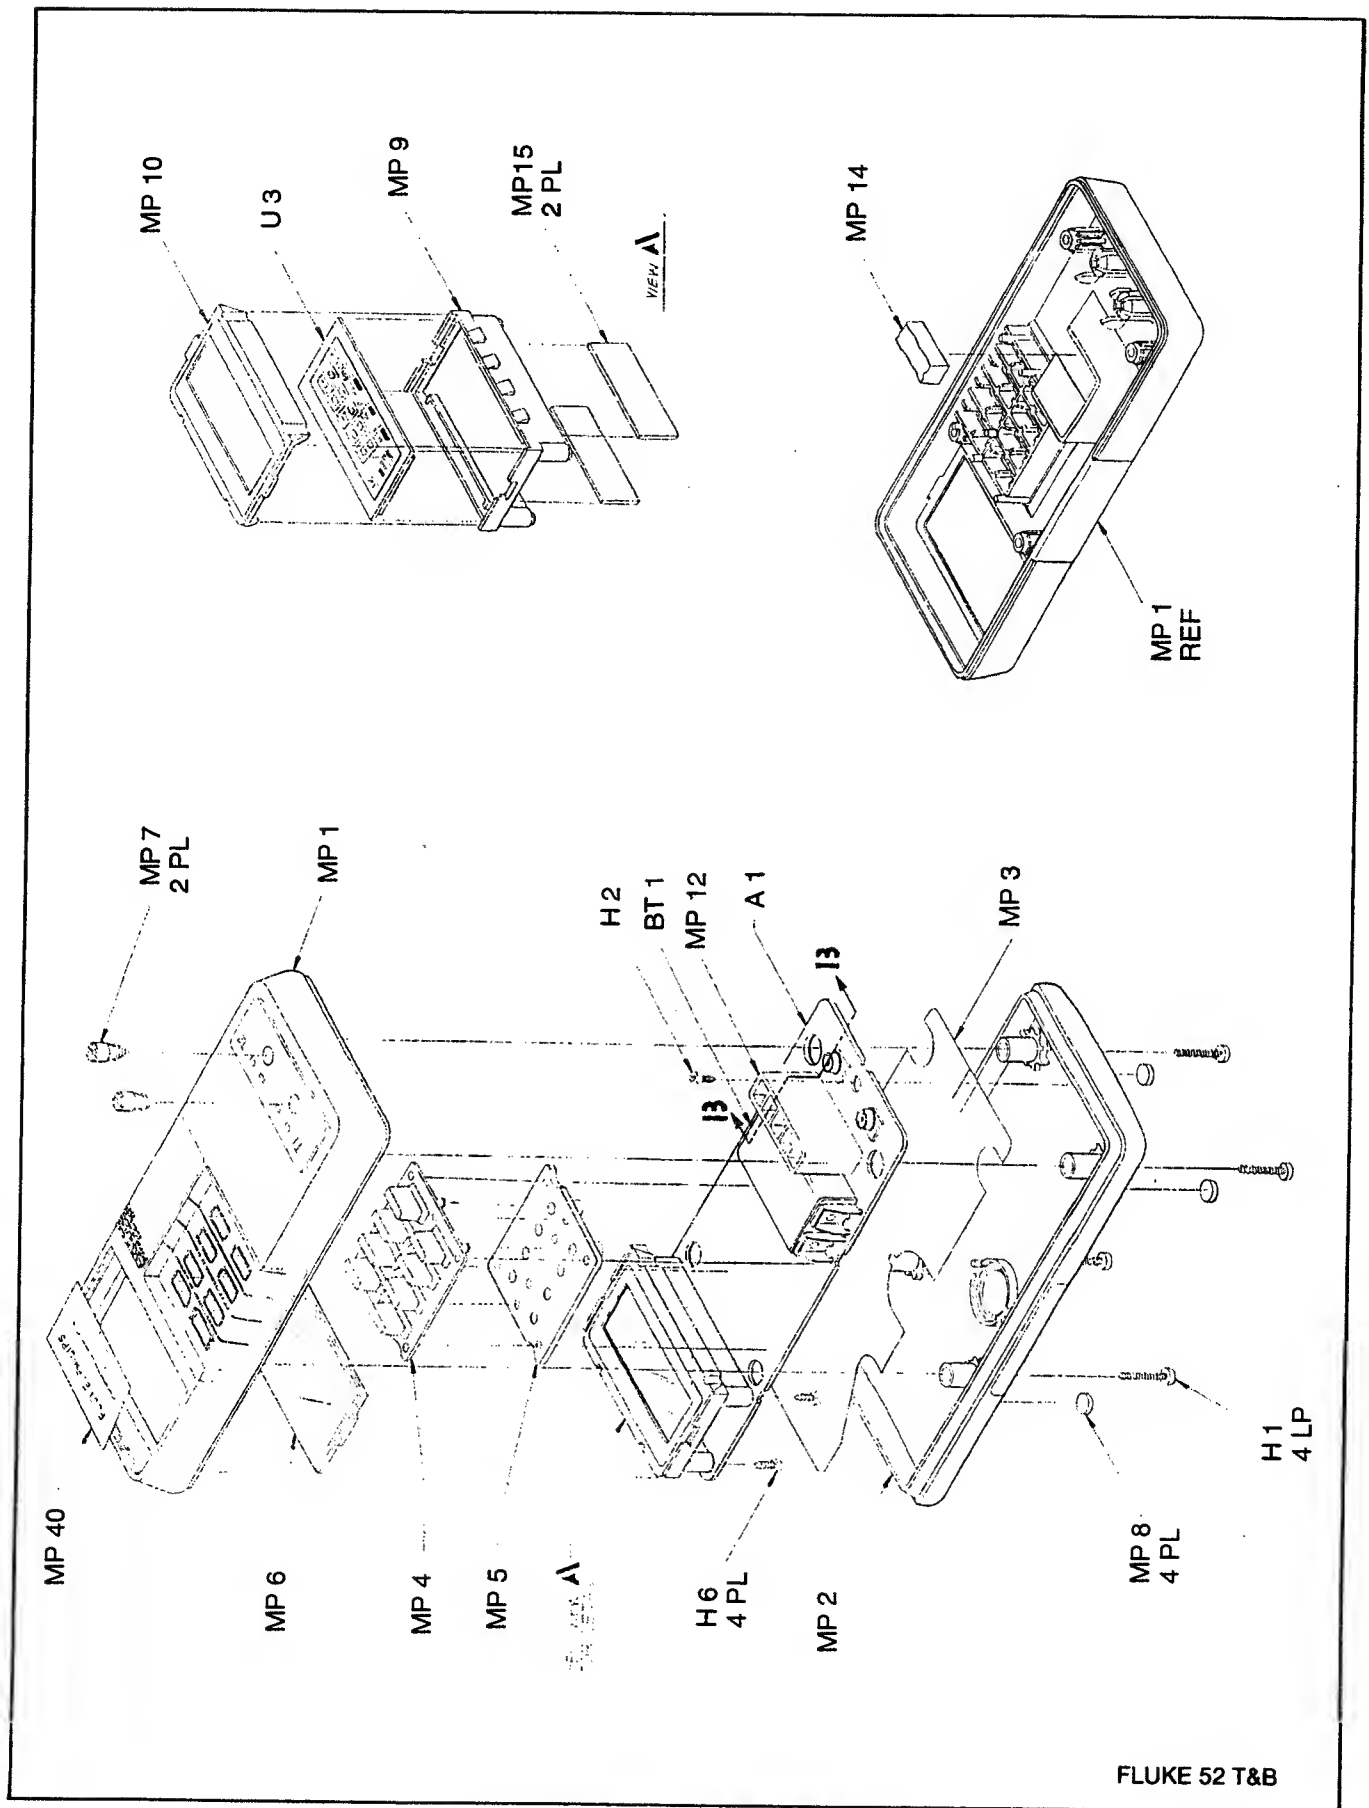


Figure 4-2. Fluke 52 Final Assembly

TABLE 4-2. A1 MAIN PCB
(SEE FIGURE 4-3.)

| REFERENCE DESIGNATOR | FLUKE STOCK | MFRS SPLY | MANUFACTURERS PART NUMBER | TOT | N O T E |
|---|---|--------------|------------------------------|------|------------------|
| -A>-NUMERICS-----> S-----DESCRIPTION----- | --NO-- | -CODE- | -OR GENERIC TYPE----- | QTY- | -E- |
| C 1, 2, 12 | CAP, CER, 4700PF, +-20%, 100V, COG | 743427 | 04222 SR591A472MAA | 3 | 1 |
| C 3, 14 | CAP, CER, 33PF, +-5%, 50V, COG | 714543 | 04222 SR595A330JAA | 2 | |
| C 4, 13 | CAP, CER, 220PF, +-20%, 50V, COG | 740654 | 04222 SR595A221MAA | 2 | |
| C 5 | CAP, CER, 0.01UF, +80-20%, 50V, Z5V | 697284 | 60705 562CZ5USE051EE103M | 1 | |
| C 6 | CAP, CER, 0.22UF, +80-20%, 50V, Z5U | 733386 | 04222 SR595E224ZAA | 1 | |
| C 7, 9 | CAP, AL, 0.47UF, +-20%, 50V, SOLV PROOF | 769695 | 62643 KMA50474M4X7LL | 2 | |
| C 8 | FLUKE 51 CAP, AL, 2.2UF, +-20%, 50V | 769687 | 62643 KMA50T2R2M45X85LL | 1 | |
| C 8 | FLUKE 52 CAP, TA, 2.2UF, +-20%, 16V | 706804 | 56289 199D225X0016AE2 | 1 | |
| C 10 | CAP, POLYPR, 0.033UF, +-10%, 63V | 721050 | 68919 MKP2033K63 | 1 | |
| C 11 | CAP, POLYES, 0.1UF, +-10%, 50V | 649913 | 68919 MKS2104K50 | 1 | |
| C 15 | CAP, TA, 22UF, +-20%, 15V | 423012 | 56289 199D226X0015DA2 | 1 | |
| CR 1- 6 | * DIODE, SI, BV=75V, IO=150MA, 500MW | 659516 | 15238 1N4448 | 6 | 2 |
| CR 7 | * ZENER, UNCOMP, 6.2V, 2%, 50UA, 250MW, DO-35 | 927392 | 89536 927392 | 1 | |
| MP 1 | * PWB, MAIN | 753244 | 89536 753244 | 1 | |
| MP 2, 5- 7 | CONTACT, THERMOCOUPLE | 745802 | 89536 745802 | 4 | 3 |
| MP 3 | CONTACT, BATTERY | 642967 | 89536 642967 | 1 | |
| MP 4 | CONTACT, BATTERY | 654228 | 89536 654228 | 1 | |
| Q 1 | * TEMPERATURE SENSOR TRANSISTOR, TAPED | 761908 | 89536 761908 | 1 | |
| Q 2 | * TRANSISTOR, SI, PNP, T092 | 698233 | 04713 2N3906 | 1 | |
| Q 3 | * TRANSISTOR, SI, P-JFET, TO-92 | 852111 | 17856 J6006 | 1 | |
| R 1, 20 | RES, CF, 51K+-5%, 0.25W | 747550 | 59124 CF1/4 513J | 2 | |
| R 2, 6, 8, | RES, CF, 22M, +-5%, 0.25W | 757104 | 59124 CF1/4 226J | 4 | 4 |
| R 12 | | 757104 | | | |
| R 3 5, 9 | RES, CF, 100K, +-5%, 0.25W | 658963 | 59124 CF1/4 104J | 8 | 5 |
| R 11, 22, 32 | | 658963 | | | |
| R 7, 13 | RES, VAR, CP, 1M, +-30%, 0.2W | 772335 | 89536 772335 | 2 | 6 |
| R 14, 31 | RES, CF, 12K, +-5%, 0.25W | 757799 | 59124 CF1/4 123J | 2 | |
| R 15 | RES, MF, 15.4K, +-1%, 0.125W, 100PPM | 772038 | 59124 MF50D1542F | 1 | |
| R 16 | RES, VAR, CERM, 30K, +-20%, .3W | 772905 | 89536 772905 | 1 | |
| R 17 | RES, MF, 100K, +-1%, 0.125W, 100PPM | 757807 | 59124 MF50D1003F | 1 | |
| R 18 | RES, MF, 562K, +-1%, 0.125W, 100PPM | 757815 | 59124 MF50D5623F | 1 | |
| R 19 | RES, CF, 750K, +-5%, 0.25W | 747543 | 59124 CF1/4 754J | 1 | |
| R 21 | RES, VAR, CERM, 500K, +-20%, .3W | 747592 | 89536 747592 | 1 | |
| R 23 | RES, MF, 301K, +-1%, 0.125W, 100PPM | 655274 | 59124 MF50D3013F | 1 | |
| R 24 | RES, MF, 332K, +-1%, 0.125W, 100PPM | 655217 | 59124 MF50D3323F | 1 | |
| R 25, 26 | RES, CF, 1M, +-5%, 0.25W | 649970 | 59124 CF1/4 105J | 2 | |
| R 27, 28 | RES, CF, 150K, +-5%, 0.25W | 758219 | 59124 CF1/4 154J | 2 | |
| U 1 | FLUKE51/52 AP52 CHIPASSEMBLY TESTED | 751552 | 89536 751552 | 1 | |
| U 2 | * IC, CMOS, 4 BIT MICRCMPTR, FLUKE52-9001 | 741520 | 89536 741520 | 1 | |
| U 4 | * IC, CMOS, QUAD XOR GATE | 586727 | 04713 MC14070BCP | 1 | |
| VR 1 | * IC, 1.23V, 60PPM TC, BAND GAP REFERENCE | 654707 | 27014 LM285BXZ-1.2D26Z | 1 | |
| W 1 | RES JUMPER, 0.02, 0.25W | 682575 | 91637 FRJ-55 | 1 | |
| Y 1 | CRYSTAL, 32.768KHZ, + 1%, 3 X 8MM | 643031 | 61429 NC-26-32.768KHZ | 1 | |
| Z 1 | RNET, CERM, SIP, FLUKE 51 10 V DIVIDER | 824144 | 89536 824144 | 1 | |

An * in 'S' column indicates a static-sensitive part.

NOTES:

1. FOR FLUKE 51, QTY = 2 (C1,12)
2. FOR FLUKE 51, QTY = 2 (CR5,6)
3. FOR FLUKE 51, QTY = 2 (MP2,5)
4. FOR FLUKE 51, QTY = 2 (R2,6)
5. FOR FLUKE 51, QTY = 7 (R3,5,28,29,30,32)
6. FOR FLUKE 51, QTY = 1 (R7)


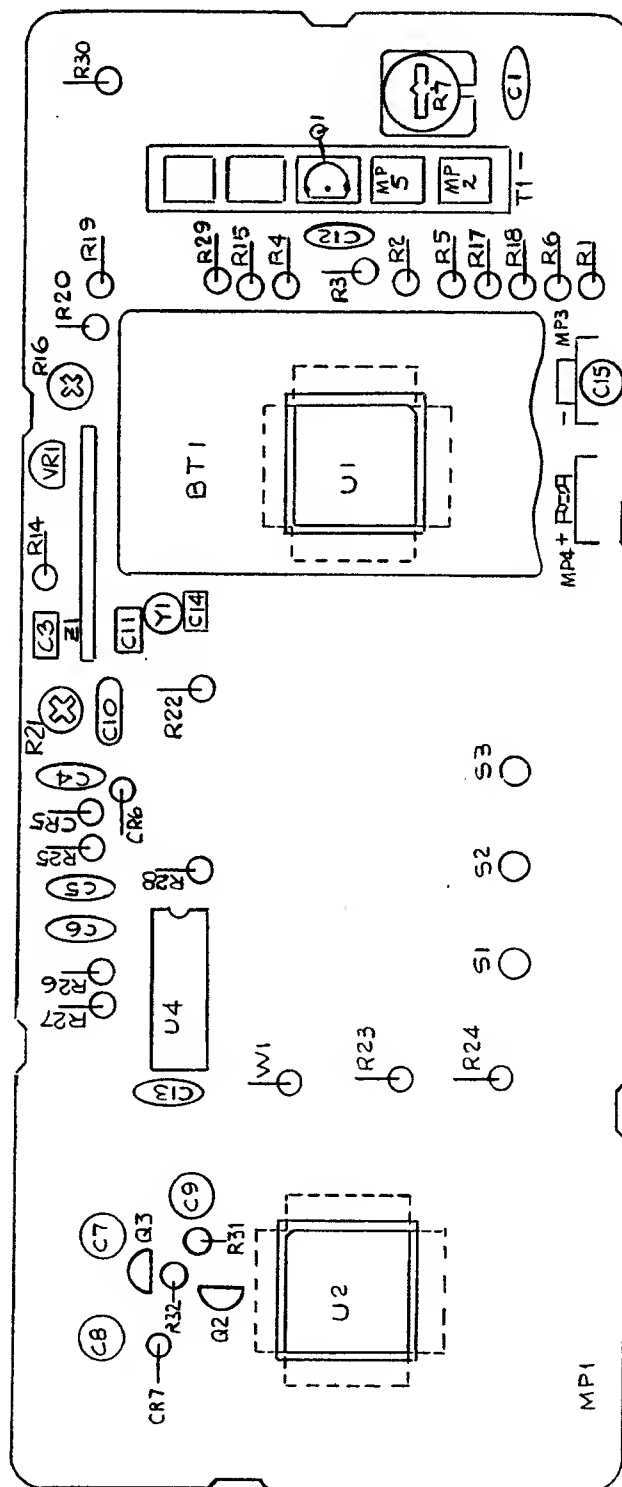


Figure 4-3. Fluke 51 A1 Main PCA

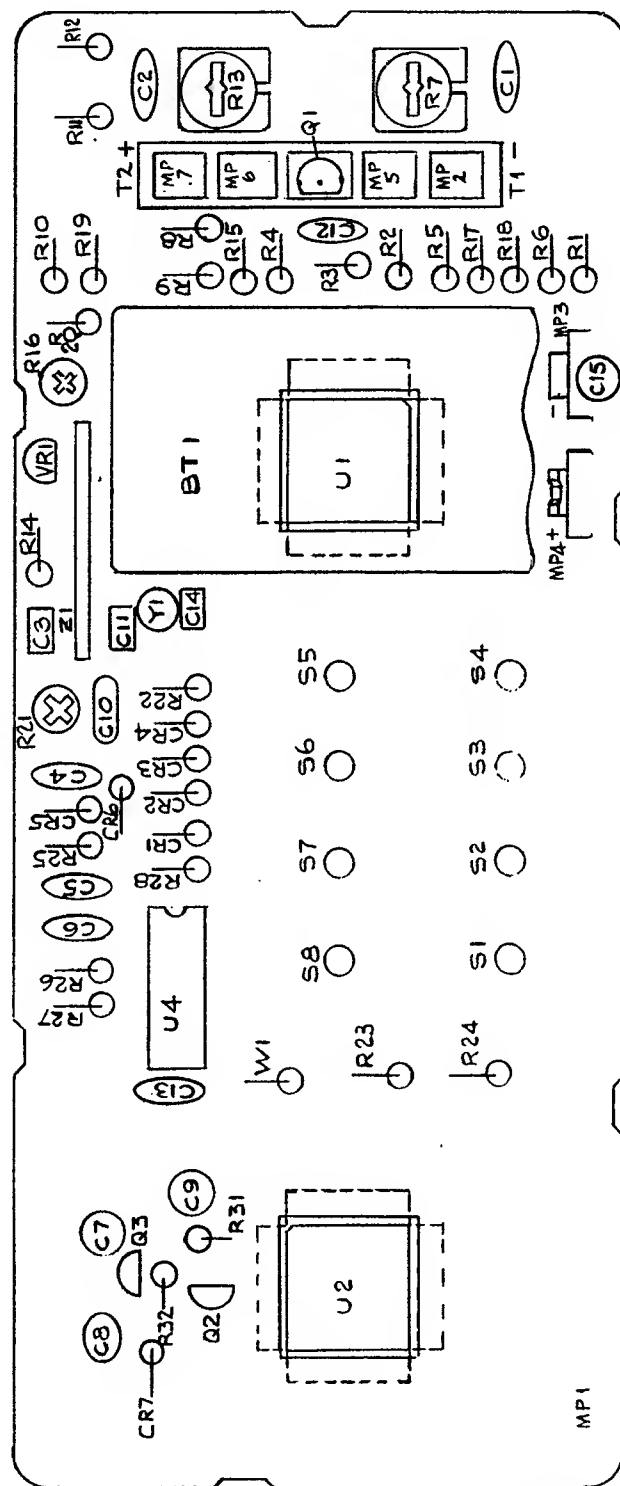

FLUKE 52-1601

Figure 4-4. Fluke 52 A1 Main PCA

Section 5

List of Abbreviations

5-1. INTRODUCTION

Table 5-1 in this section contains a list of definitions for abbreviations used in the schematic drawings for the Fluke 51 and 52 K/J Thermometers.

Table 5-1. Abbreviations


| ABBREVIATION | DEFINITION |
|--------------|--------------------------|
| ACL | Auto Clear (Reset) |
| AZ | Auto Zero |
| CLAMP | Clamp Voltage Source |
| CLK | Clock |
| COM | Instrument Common |
| EC | Common Reference Voltage |
| INT | Integrator Output |
| K (kilo) | Multiple of 1000 |
| K0 | Buffer Output 0 |
| K1 | Buffer Output 1 |
| M (mega) | Multiple of 1000000 |

Table 5-1. Abbreviations (cont)

| ABBREVIATION | DEFINITION |
|---------------|-------------------------------|
| REF+ | Positive A/D Reference |
| REF- | Negative A/D Reference |
| RJS HI | Reference Junction Sense High |
| RJS LO | Reference Junction Sense Low |
| TLO | Thermocouple Low |
| T1HI | + Side of Thermocouple 1 |
| T2HI | + Side of Thermocouple 2 |
| T1LO | - Side of Thermocouple 1 |
| T2LO | - Side of Thermocouple 2 |
| T1OS | Thermocouple 1 Offset |
| T2OS | Thermocouple 2 Offset |
| T1PU | Thermocouple 1 Pull-up |
| T2PU | Thermocouple 2 Pull-up |
| VDD | Positive Supply |
| VM | LCD Middle Voltage |
| VPU | Pull-up Voltage Source |
| VSS | Negative Supply |
| XTL | Crystal Oscillator |
| p (pico) | Multiple of .000000000001 |
| μ (micro) | Multiple of .000001 |

Section 6
Schematic Diagram

| FIGURE | TITLE | PAGE |
|---------------|----------------------------|-------------|
| 6-1. | Fluke 51 A1 Main PCA | 6-2 |
| 6-2. | Fluke 52 A1 Main PCA | 6-4 |

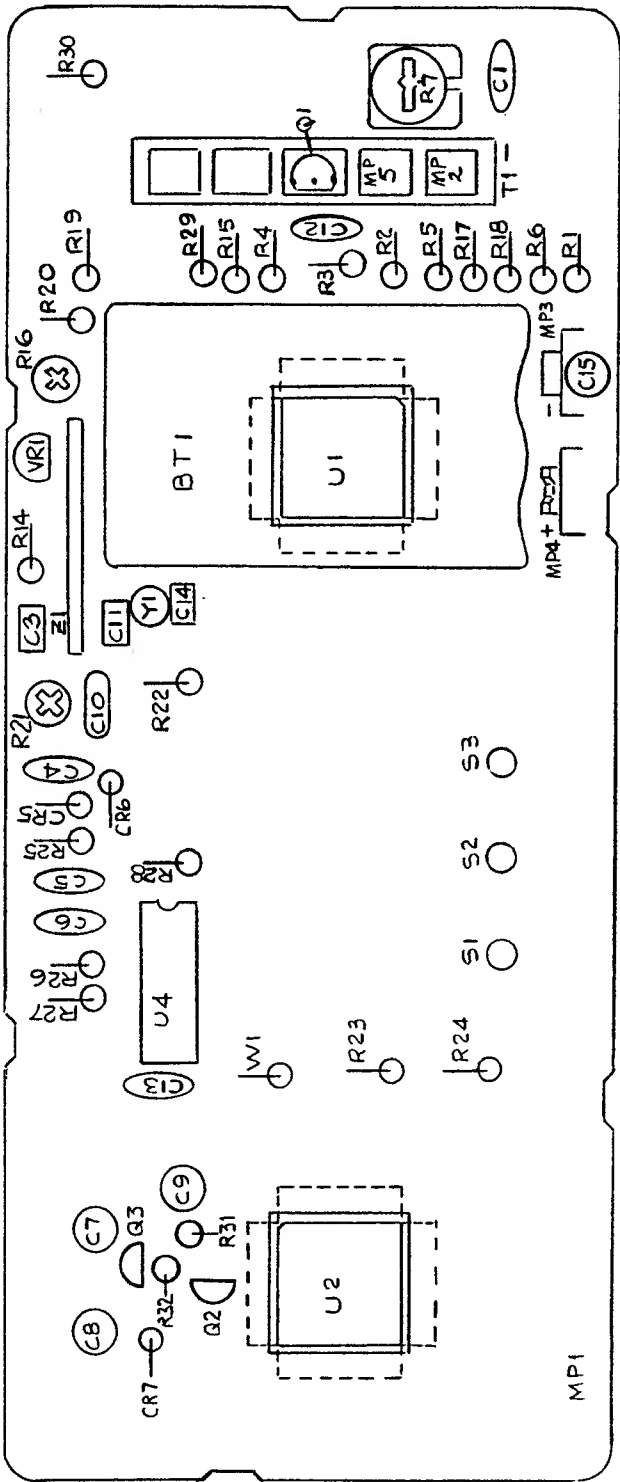

FLUKE 51-1601

Figure 6-1. Fluke 51 A1 Main PCA

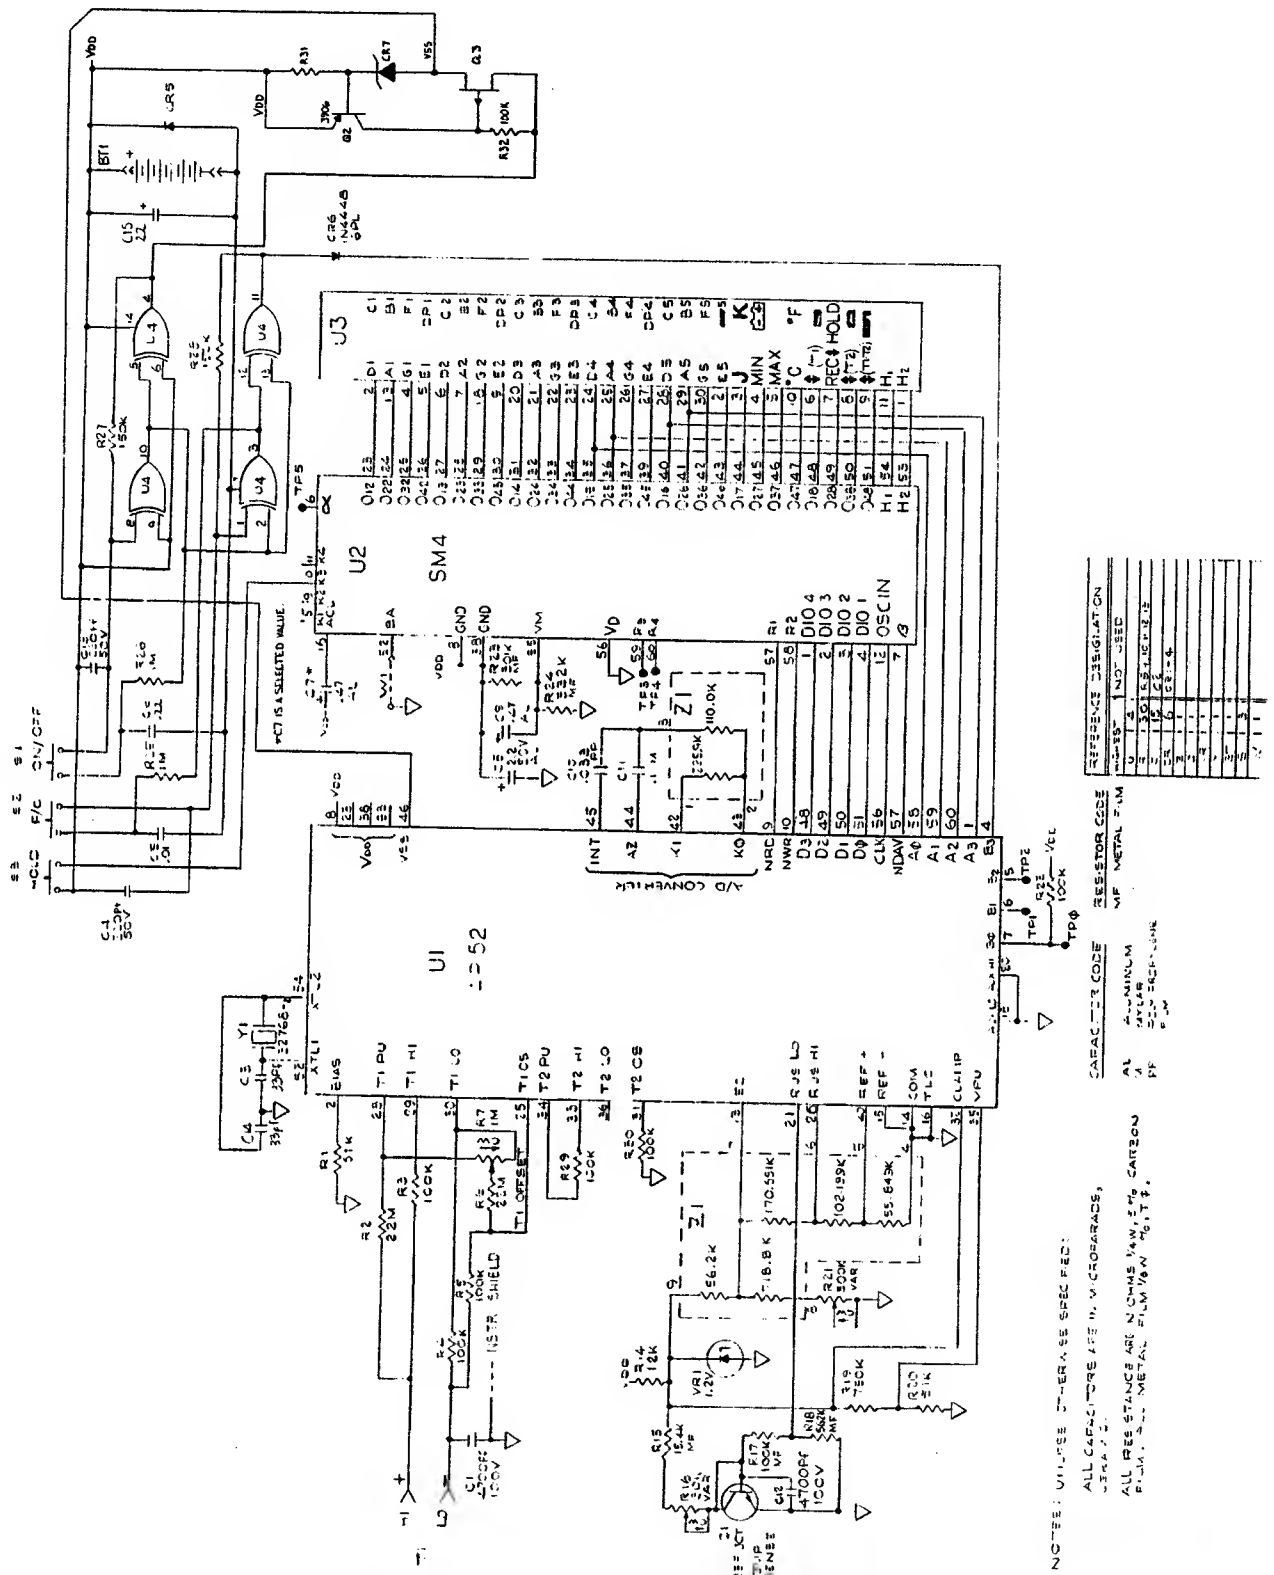


Figure 6-1. Fluke 51 A1 Main PCA (cont)

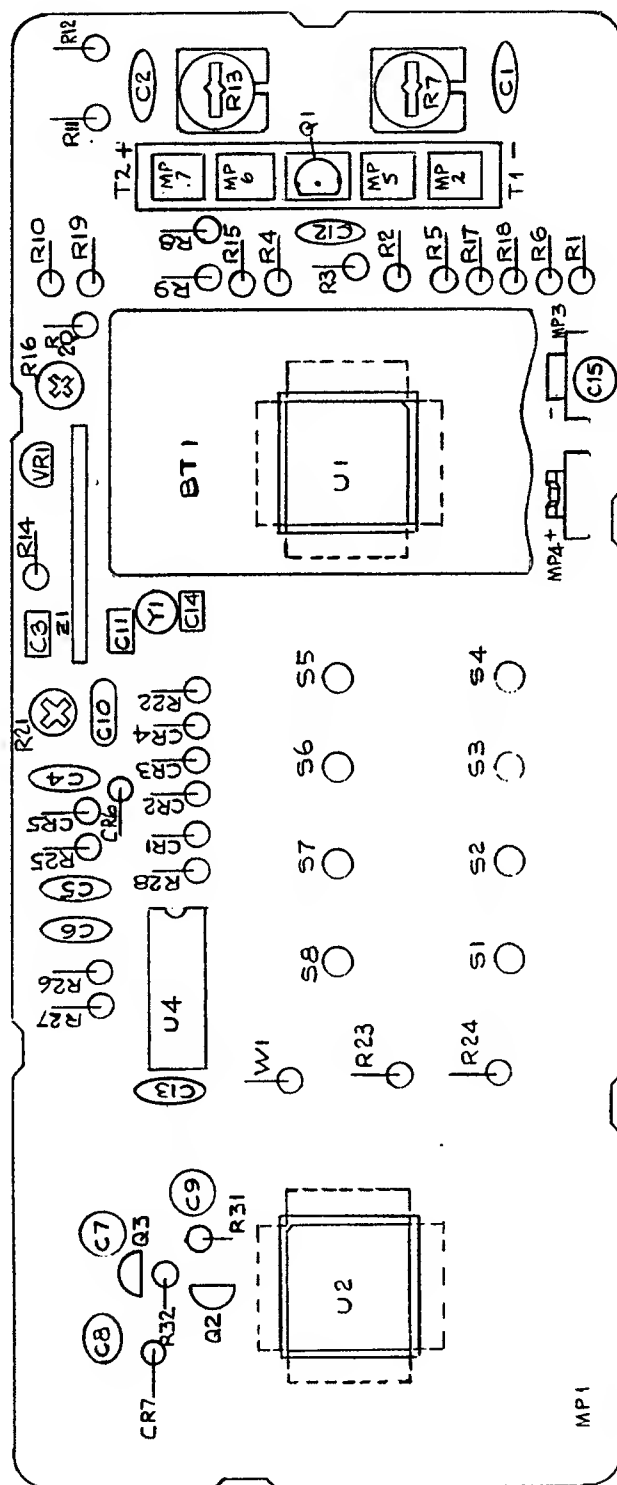


Figure 6-2. Fluke 52 A1 Main PCA

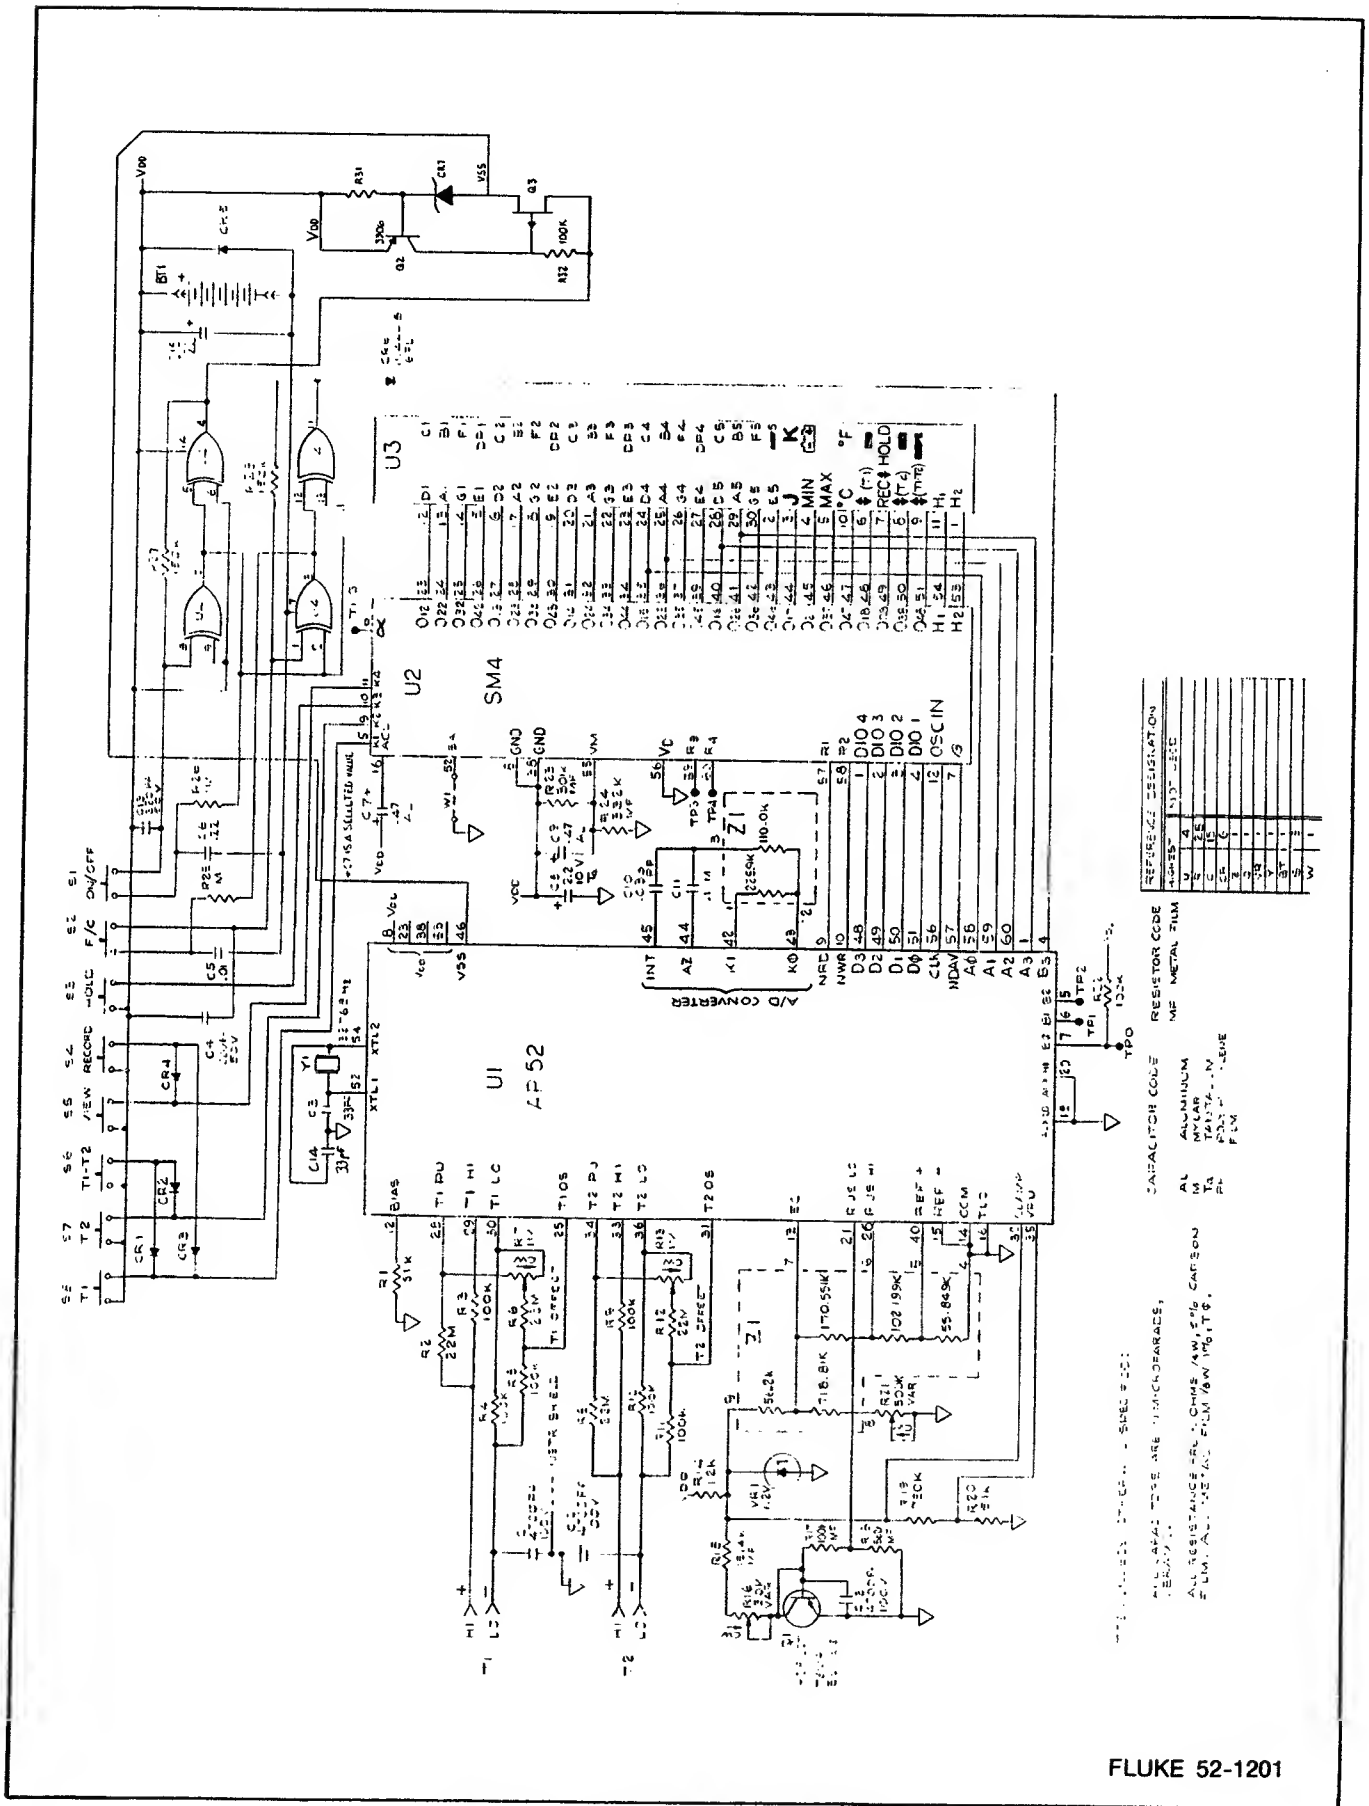



Figure 6-2. Fluke 52 A1 Main PCA (cont)



static awareness




A Message From
Fluke Corporation

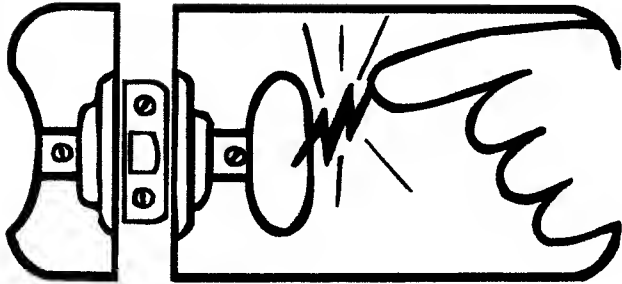


Some semiconductors and custom IC's can be damaged by electrostatic discharge during handling. This notice explains how you can minimize the chances of destroying such devices by:

1. Knowing that there is a problem.
2. Learning the guidelines for handling them.
3. Using the procedures, packaging, and bench techniques that are recommended.


The following practices should be followed to minimize damage to S.S. (static sensitive) devices.

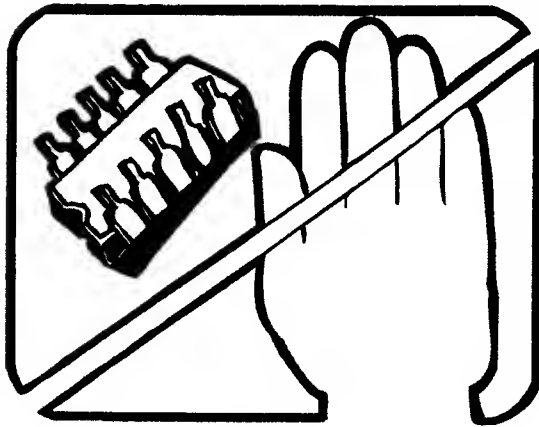


1. MINIMIZE HANDLING

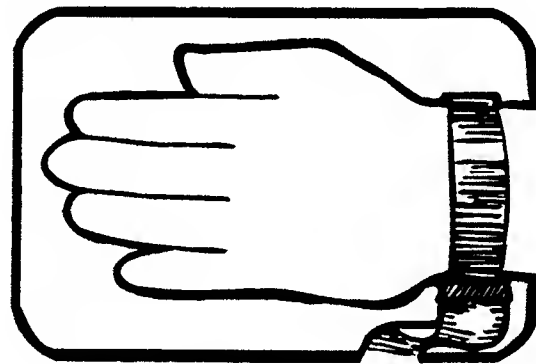


3. DISCHARGE PERSONAL STATIC BEFORE HANDLING DEVICES. USE A HIGH RESISTANCE GROUNDING WRIST STRAP.

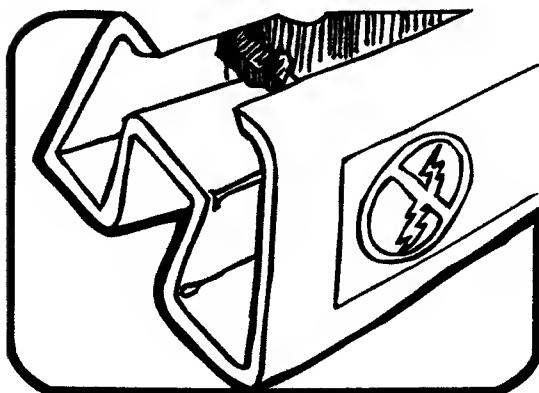


2. KEEP PARTS IN ORIGINAL CONTAINERS UNTIL READY FOR USE.

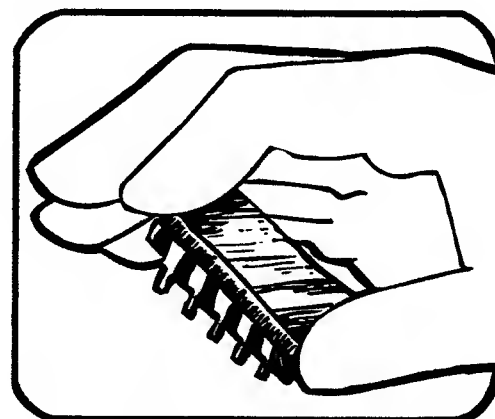


4. HANDLE S.S. DEVICES BY THE BODY.

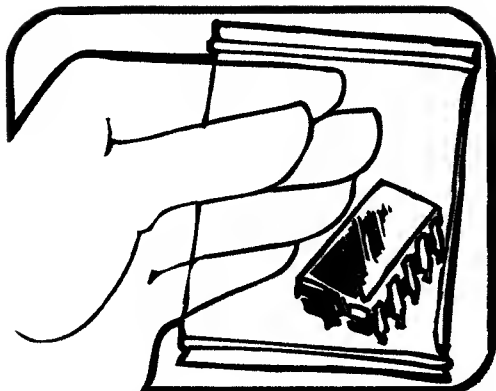

5. USE STATIC SHIELDING CONTAINERS FOR HANDLING AND TRANSPORT.

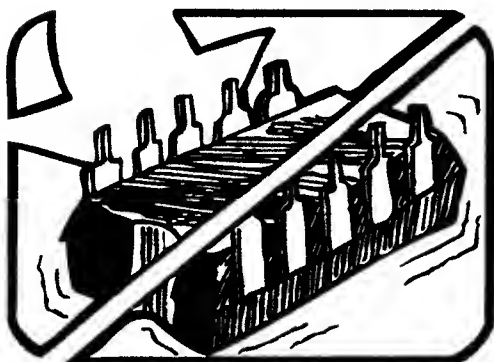


6. DO NOT SLIDE S.S. DEVICES OVER ANY SURFACE.

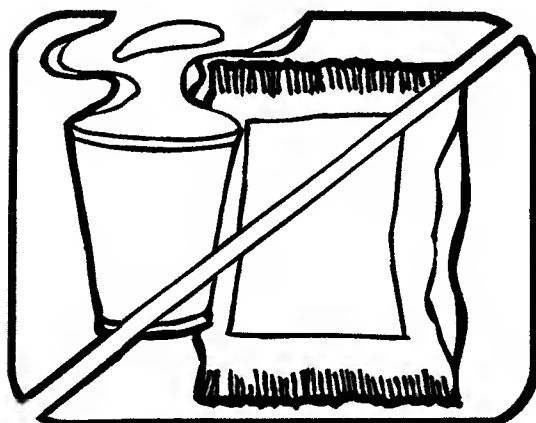


7. AVOID PLASTIC, VINYL AND STYROFOAM® IN WORK AREA.

PORTIONS REPRINTED
WITH PERMISSION FROM TEKTRONIX INC.
AND GENERAL DYNAMICS, POMONA DIV.

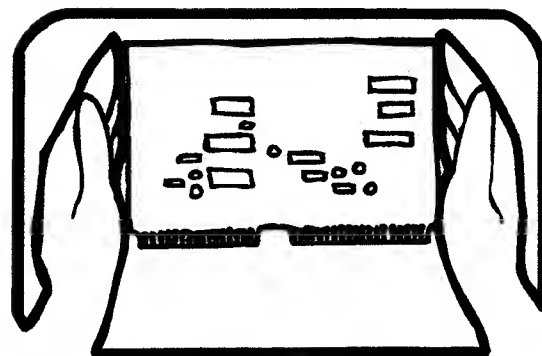

8. WHEN REMOVING PLUG-IN ASSEMBLIES HANDLE ONLY BY NON-CONDUCTIVE EDGES AND NEVER TOUCH OPEN EDGE CONNECTOR EXCEPT AT STATIC-FREE WORK STATION. PLACING SHORTING STRIPS ON EDGE CONNECTOR HELPS PROTECT INSTALLED S.S. DEVICES.

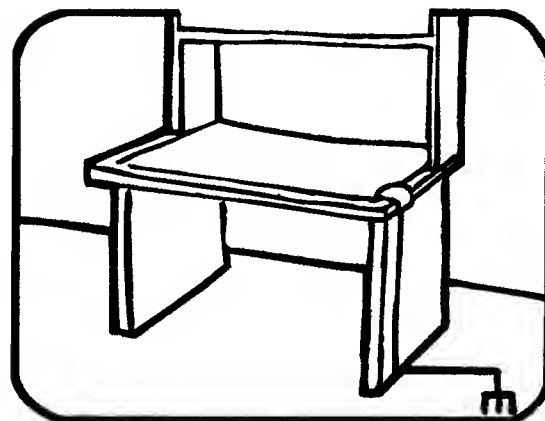

9. HANDLE S.S. DEVICES ONLY AT A STATIC-FREE WORK STATION.

10. ONLY ANTI-STATIC TYPE SOLDER-SUCKERS SHOULD BE USED.

11. ONLY GROUNDED-TIP SOLDERING IRONS SHOULD BE USED.

Service Centers

USA

California

FLW
Fluke Calibration Center
C/o FLW Service Corporation
3505 Cadillac Ave., Bldg E
Costa Mesa, CA 92626
TEL: (714) 751-7512
FAX: (714) 755-7332

Dallas

Fluke Service Center
2104 Hutton Drive
Suite 112
Cerrilton, TX 75006
TEL: (214) 406-1000
FAX: (214) 247-5642

Fluke Service Center
42711 Lawrence Place
Fremont, CA 94538
TEL: (510) 651-5112
FAX: (510) 651-4962

Illinois

Fluke Service Center
1150 W. Euclid Avenue
Pekin, IL 60067
TEL: (708) 705-0500
FAX: (847) 705-9989

New Jersey

Fluke Service Center
W. 75 Century Rd
Paramus, N.J. 07652-0930
TEL: (201) 599-9500 (599-0919)
FAX: (201) 599-2093

Washington

Fluke Service Center
Fluke Corporation
Building #4
1420 - 75TH St. S.W.
Everett WA 98203
TEL: (206) 356-5560
FAX: (206) 356-6390

INTERNATIONAL

Australia

Phillips Sci. and Ind., Pty., L.
745 Springvale Road
Mulgrave
Victoria 3170
TEL: 61-3-881-3666
FAX: 61-3-881-3636

Phil. Sci. & Ind. Bk F, Centrect.
34 Waterloo Road
North Ryde, N.S.W. 2113
TEL: 61-2-888-8222
FAX: 61-2-888-0440

Austria

Fluke Vertriebsges. GMBH (GM)
SudrandstraBe 7
P.O. Box 10, A-1232 Vienna
TEL: 43-1-614-100
FAX: 43-1-614-1010

Bahrain

Mohammed Fakhroo & Bros.
P.O. Box 439
Bahrain
TEL: 973-253529
FAX: 973-275996

Belgium

N.V. Fluke Belgium S.A.
Sales & Service Dept.
Langeveldpark - Unit 5 & 7
P.Bastelousstraat 2-4-6
1600 St. Pieters - Leeuw
TEL: 218-2-331-2777 (ext 218)
FAX: 32-2-331-1489

Bolivia

Casilla 7295,
Calle Ayacucho No. 208
Edificio Flores, 5to. Piso
La Paz, Bolivia
TEL: 591-2-317531 or 317173
FAX: 591-2-317545

Brazil

Philips Medical Systems, LTDA
Av. Interlegos North
3493 - Campo Grande
04661-200 Sao Paulo S.P.
TEL: 55-11-523-4811
FAX: 55-11-524-4873 (ID 2148)

Sigtron Instrumentos E. Servicos
Rua Alvaro Rodrigues
269 - Brooklin
Sao Paulo, Sp
TEL: 55-11-240-7359
FAX: 55-11-533-3749

Sistest

Sist. Instr. Testes Ltda
Av. Ataulfo De Paiva
135 S/ 1117 - Leblon 22.449-900
Rio De Janeiro, RJ, Brazil
TEL: 55-21-259-5755 or 512-3679
FAX: 55-21-259-5743

Bulgaria

Ac Sophilco, Cust. Supp. Serv.
P.O. Box 42
1309 Sofia, Bulgaria
TEL: 359-2-200785
FAX: 359-2-220910

C.S.F.R.

Eiso
NA. Berance 2
16200 Praha 6
TEL: 42-2-316-4810
FAX: 42-2-364986

Data Elektronik BRNO

Jugoslevska 113
61300 Brno
TEL: 42-5-57400-2
FAX: 42-5-574002

Canada

Fluke Electronics Canada Inc.
400 Britannia Rd East, Ut #1
Mississauga, Ontario
L4Z 1X9
TEL: 905-890-7600
FAX: 905-890-6866

Chile

Intronica, Instrumen Electronica,
S.A.C.I.
Guardie Vieja 181 Of. 503
Casilla 16500, Santiago 9
TEL: 56-2-232-6700

China

Fluke S.C., Room 2111
Scite Tower
Jianguomenwai Dajie
Beijing 100004, PRC
TEL: 86-10-512-6351, 6319, 3437
FAX: 86-10-512-3437

Colombia

Sistemas E Instrument., Ltda.
Calle 83, No. 37-07
Po Box 29583
Santa Fe De Bogota
TEL: 57-1-287-5424
FAX: 57-1-218-2660

Costa Rica

Electronic Engineering, S.A.
Carretera de Circunvalacion
Sabanilla Av. Novena
P.O. Box 4300-1000, San Jose
TEL: 506-253-3759 or 225-8793
FAX: 506-225-1286

Croatia

Kalitim - Zagreb
Fluke Sis & Serv. Draga 8
41425 Sveta Jana
TEL: 385-41-837115
FAX: 385-41-837237

Denmark

Fluke Danmark A/S, Cust. Supp.
Ejby Industrivej 40
DK 2600 Glostrup
TEL: 45-43-44-1900 or 1935
FAX: 45-43-43-9192

Ecuador

Proteco Coasin Cia., Ltda.
Av. 12 de Octubre 2449 y
Orallena
P.O. Box 17-03-228-A, Quito
TEL: 593-2-230283 or 520005
FAX: 593-2-561980

Egypt

EEMCO
Electronic Equipment Mktg Co.
9 Hassan Mazher St.
P.O. Box 2009
St. Heliopolis 11361
Cairo, Egypt
TEL: 20-2-417-8296
FAX: 20-2-417-8296

Fed. Rep. of Germany

Fluke Deutschland GmbH
Customer Support Services
Servicesstutzpunkt VFN5
Oskar-Messner-Strasse 18
85737 Ismaning/Munich
TEL: 49-89-9961-1260
FAX: 49-89-9961-1270

Fluke Deutschland
(CSS), Servicesstutzpunkt VFN5
Meiendorfer Strasse 205
22145 Hamburg
TEL: 49-40-679-6434
FAX: 49-40-679-7653

Finland

Fluke Finland Oy
Sinikalliontie 3, P.L. 151
SF 02631 Espoo
TEL: 358-0-6152-5600
FAX: 358-0-6152-5630

France

Fluke France S.A.
37 Rue Voltaire
BP 112, 93700 Drancy, Cedex
TEL: 33-1-4896-6300
FAX: 33-1-4896-6330

Greece

Philips S.A. Hellenique
Fluke Sales & Service Manager
15, 25th March Street, P.O. Box
3153, 177 78 Tavoros Athens
TEL: 30-1-489-4911 or 4262
FAX: 30-1-481-8594

Hong Kong

Schmidt & Co, Ltd. 1st Floor
323 Jaffe Road
Wanchai
TEL: 852-9223-5623
FAX: 852-834-1848

Hungary

MTA MMSZ KFT, Srv. / Gen. Mgr
Etele Ut. 59 -61
P.O. Box 58
H 1502 Budepest
TEL: 361-186-9589 or 209-3444
FAX: 361-161-1021

Iceland

Taeknival HF
P.O. Box 8294, Skeifunni 17
128 Reykjavik
TEL: 354-1-681665
FAX: 354-1-680664

India

Hinditron Services Pvt. Inc.
33/44A 8th Main Road
Raj Mahal Vilas Extension
Bengalore 560 080
TEL: 91-80-334-8266 or 0068
FAX: 91-33-247-6844

Hinditron Services Pvt. Ltd

Hinditron House, 23-B
Mehel Industrial Estate
Mehekeli Caves Rd, Andheri East
Bombay 400 093
TEL: 91-22-836-4560, 6590
FAX: 91-22-836-4682

Hinditron Services Pvt. Ltd

Castle House, 5th Floor
5/1 A, Hungerford Street
Calcutta 700 017
TEL: 91-33-400-194
FAX: 91-33-247-6844

Hinditron Services Pvt. Ltd

204-206 Hemkunt Tower
98 Nehru Place
New Delhi 110 019
TEL: 91-11-641-3675 or 643-0519
FAX: 91-11-642-9118

Hinditron Services Pvt. Ltd.

Field Service Center
Emerald House, 5th Floor
114 Sarojini Devi Road
Secunderabad 500 003
TEL: 91 40-844033 or 843753
FAX: 91-40-847585

Indonesia

P. T. Daeng Bro, Phillips House
J/n H.R. Rasuna Seid Kav. 3-4
Jakarta 12950
TEL: 62-21-520-1122
FAX: 62-21-520-5189 or 62-21-520-5189

Israel

R.D.T Equipment & Sys, Ltd.
P.O. Box 58072
Tel-Aviv 61580
TEL: 972-3-845-0745
FAX: 972-3-647-8908

Italy

Fluke Italia S.R.L., CSS
Viale Delle Industrie, 11
20090 Vimodrone (MI)
TEL: 39-2-268-434-203 or 4341
FAX: 39-2-250-1645

Service Centers (cont)

Japan

Fluke Corp., Sumitomo Higashi
Shinbashi Bldg.
1-1-11 Hamamatsucho
Minato-ku, Tokyo 105
TEL: 81-3-3434-0188 or 0181
FAX: 81-3-3434-0170

Kenya

Walterfang
P.O. Box 14897
Nairobi, Kenya
TEL: 254-2
FAX: 254-2

Korea

B&P International Co., Ltd.
Geopung Town A-303
203-1 Nonhyun-Dong
Kangnam-Ku
Seoul 135-010
TEL: 82 12 546-1457
FAX: 82 12 546-1458

IL MYOUNG, INC.

Youngdong P.O. Box 1486
780-46, Yeongsam-Dong
Kangnam-Ku, Seoul
TEL: 82 2 552-8582-4
FAX: 82 2 553-0388

Kuwait

Yusuf A. Alghanim & Sons W.L.L.
P.O. Box 223 Safat
Alghanim Industries
Airport Road Shuwaikh
13003 Kuwait
TEL: 965-4842988
FAX: 965-4847244

Malaysia

CNN, SDN. BHD.
17D, 2nd Floor
Lebuhraya Batu Lancang
Taman Seri Damai
11600 Jelutong Penang
TEL: 60-4-657-9584
FAX: 60-4-657-0835

Mexico

Matro. Y Calibraciones Ind., S.A.
Diagonal No. 17 - 3 Piso
Col. Del Valle
C.P. 03100, Mexico D.F.
TEL: 52-5-682-8040
FAX: 52-5-687-8695

Netherlands

Fluke Nederland B.V. (CSS)
Afdeling Service
Science Park Eindhoven 5108
5692 EC Son
TEL: 31-40-2678
FAX: 31-40-2678

New Zealand

Phillips Scientific & Ind., Pty., L.
Private Bag 41904,
St. Lukes, 2 Wagener Place
Mt. Albert, Auckland 3
TEL: 64-9-894-4160
FAX: 64-9-849-7814

Nigeria

Philips Projects Centra
Resident Delegeate / PMB 80065
8, Kofo Abayomi Street
Victoria Island, Nigeria
TEL: 234-1-262-0632
FAX: 234-1-262-0631

Norway

Fluke Norway A/S, Cust. Support
P.O. Box 6054 Etterstad
N-0601 Oslo
TEL: 47-22-653400
FAX: 47-22-653407

Pakistan (Philips)

Philips Elec. Ind. of Prof. Sys. Div.
Islamic Cham. of Commerce
St-2/A, Block 9, KDA Scheme 5,
Clifton, Karachi-75600
TEL: 92-21-587-4641 or 4649
FAX: 92-21-577-0348

Peru

Impor. & Repres. Electronicas
S.A., JR. Pumacahua 955
Lima 11
TEL: 51-14-23-5099
FAX: 51-14-31-0707

Philippines

Spark Electronics Corp.
P.O. Box 610, Greenhills
Metro Manila 1502
TEL: 63-2-700-621
FAX: 63-2-721-0491 or 700-709

Poland

Elec. Instr. Srv. Philips Cons.
UL. Malechowska 6
60 188 Poznan
TEL: 48-61-681998
FAX: 48-61-682256

Portugal

Fluke Iberica S.L.
Seales Y Services Dept
Campo Grande 35 - 7b
1700 Lisboa
TEL: 351-1-795-1712
FAX: 351-1-795-1713

Romania

Ronex S.R.L., Cust. Supp. Serv.
Str. Transilvaniei Nr. 24
70778 Bucharest - I
TEL: 40-1-614-3597 or 3598
FAX: 40-1-659-4468

Russia

Infomedia
UL. Petrovsko Razumovsky
Proezd. 29
103287 Moscow
TEL: 7-95-212-3833
FAX: 7-95-212-3838

Saudi Arabia

A. Rajab & Silsilah Co. S&S Dept.
P.O. Box 203
21411 Jeddah
TEL: 966-2-661-0006
FAX: 966-2-661-0558

Singapore

Fluke Singapore Pte., Ltd.
Fluke ASEAN Regional Office
#27-03 PSA Building
460 Alexandra Road
Singapore 119963
TEL: 65-276-5161
FAX: 65-276-5929

South Africa

Spescom Measure. (PTY) Ltd.
Spescom Park
Cm. Alexandra Rd. & Second St.
Halfway House, Midrand 1685
TEL: 27-11-315-0757
FAX: 27-11-805-1192

Spain

Fluke Iberica S.L.
Centro Empresarial Euronora
c/Ronda de Poniente, 8
28760-Tras Cantos
Madrid, Spain
TEL: 34-1-804-2301
FAX: 34-1-804-2496

Sweden

Fluke Sverige AB, (CSS)
P.O. Box 61
S-164 94 Kista
TEL: 46-8-751-0235 or 0230
FAX: 46-8-751-0480

Switzerland

Fluke Switzerland AG, (CSS)
Rutistrasse 28
CH 8952 Schlieren
Switzerland
TEL: 41-1-730-3310 or 730-3932
FAX: 41-1-730-3932

Taiwan

Schmidt Scientific Taiwan, Ltd.
6th Floor, No. 109,
Tung Hsing Street
Taipei, Taiwan R.O.C.
TEL: 886-2-767-8890 or 746-
2720
FAX: 886-2-767-8820

Thailand

Measuretronix Ltd.
2102/31 Ramkamhang Road
Bangkok 10240
TEL: 66-2-375-2733 or 2734
FAX: 66-2-374-9965

Turkey

Pestas Prof. Elektr. Sist. Tic. V
Selcuklar Caddesi
Meyden Apt. No. 49, Daire 23
Akatlar 80630 Istanbul
TEL: 90-212-282-7838
FAX: 90-212-282-7839

U.A.E.

Haris Al Afaq Ltd.
P.O. Box 8141
Dubai
TEL: 971-4-283623 or 283624
FAX: 971-4-281285

United Kingdom

Fluke U.K. LTD. (CSS)
Colonial Way
Watford, Hertfordshire WD2 4TT
TEL: 44-923-240511
FAX: 44-923-225067

Uruguay

Coasin Instrumontos S.A.
Casilla de Correo 1400
Libertad 2529, Montevideo
TEL: 598-2-492-436, 659
FAX: 598-2-492-659

Venezuela

Coasin C.A.
Calle 9 Con Calle 4, Edif. Edinurbi
Piso-3
La Urbina
Caracas 1070-A, Venezuela
TEL: 58-2-241-6214
FAX: 58-2-241-1939

Vietnam

Schmidt-Vietnam Co., Ltd.
8/FI. Schmidt Tower
Hanoi International Tech. Ctr
KM8, Highway 32, Cau Giey
Tu Liem, Hanoi
Vietnam
TEL: 84-4-346186 or 346187
FAX: 84-4-346-188

West Indies

Western Scientific Co., Ltd.
Freeport Mission Road
Freeport, Trinidad
West Indies
TEL: 809-673-0038
FAX: 809-673-0767

Yugoslavia

Jugoelektro Beograd
T & M Customer Support
Services
Knez Mihailova 33
11070 Novi
TEL: 38-11-182470
FAX: 38-11-638209

Zimbabwe

Field Technical Sales
45, Kelvin Road North
P.O. Box Cy535 Causeway
Harare, Zimbabwe
TEL: 263-4-750381 or 750382
FAX: 263-4-729970